

MECH 421 — Lab 3

# **Op Amp Circuits for DC Signal Processing**

Ryan Edric Nashota (ID: 33800060)

Lab Performed: 12 February 2025

Report Submitted: 19 February 2025

## Table of Contents

<b>1</b>	<b>Introduction</b>	<b>1</b>
<b>2</b>	<b>Experimental Overview</b>	<b>1</b>
2.1	Equipment . . . . .	1
2.2	Measurement Uncertainty Handling . . . . .	1
<b>3</b>	<b>Part 1 — Temperature Sensing</b>	<b>2</b>
3.1	Exercise 1: Thermistor Characterization . . . . .	2
3.2	Exercise 2: Firmware and Desktop Acquisition . . . . .	8
<b>4</b>	<b>Part 2 — Weight Scale</b>	<b>11</b>
4.1	Exercise 1: Load-Cell Assembly . . . . .	11
4.2	Exercise 2: 2.5 V Reference . . . . .	11
4.3	Exercise 3: Mock Strain Gauge . . . . .	13
4.4	Exercise 4: Instrumentation Amplifier . . . . .	15
4.5	Exercise 5: Output Stage . . . . .	17
4.6	Exercise 6: Embedded Acquisition . . . . .	21
4.7	Exercise 7: Calibration . . . . .	22
4.8	Exercise 8: Desktop UI . . . . .	22
<b>5</b>	<b>Discussion</b>	<b>23</b>
<b>6</b>	<b>Conclusions</b>	<b>23</b>

## Table of Figures

1	Thermistor circuit schematic . . . . .	2
2	LTspice DC sweep of the thermistor divider highlighting the simulated transfer curve. . . . .	3
3	Measured bath voltages/resistances (squares) compared to the Beta-model prediction (solid lines). The star marks the nominal 25 °C point ( $R_T = 10.0 \text{ k}\Omega$ , $V_{NTC} = 1.65 \text{ V}$ ). . . . .	4
4	Measured 0 °C $\rightarrow$ 60 °C heating transition. The gray trace shows the original capture, the blue trace shows the automatically trimmed window used for fitting, the dashed red line is the exponential fit, and the dotted green line marks $t_{63\%}$ . . . . .	5
5	Summary of fitted time constants across all transitions; error bars show run-to-run standard deviation. . . . .	5
6	Representative thermistor step responses. The dashed line marks the detected step start, while the red cross indicates the 63% crossing reported as $\tau$ . . . . .	7
7	Overlay of every heating/cooling capture after aligning the detected step start. The traces are generated directly from the measured $\tau$ values and illustrate how all transitions converge to a $\sim 10 \text{ s}$ response. . . . .	8
8	WinForms UI mock-up showing raw temperature, compensated value, and rolling waveform (placeholder for final screenshot). . . . .	10
9	Recorded temperature waveforms and first-order fits from <code>process_ntc.py</code> ; dashed lines mark the detected step, and the dotted verticals show the $1\tau$ crossing. . . . .	10
10	Mechanical assembly of the strut, load cell, and mass hanger (photograph placeholder). . . . .	11
11	Mechanical assembly of the strut, load cell, and mass hanger (photograph placeholder). . . . .	11
12	LTspice schematic for 2.5 V reference. . . . .	12
13	Mock Strain Gauge Schematic . . . . .	13
14	LTspice schematic of the Mock Strain Gauge. . . . .	14
15	Exercise 4 instrumentation amplifier schematic. . . . .	15
16	Instrumentation amplifier LTspice schematic and simulated output. . . . .	17
17	LTspice schematic of the output stage. . . . .	19
18	Voltage outputs for no load and maximum load. . . . .	19
19	LT5400 - Differential Op-Amp configuration. . . . .	21
20	Planned C# UI screenshot highlighting tare, stability indicator, and rolling weight plot (placeholder). . . . .	23

## List of Tables

1	Thermistor characterization data and temperature error. . . . .	3
2	Component values used for the thermistor divider model. . . . .	5
3	Extracted metrics for the seven valid thermistor step-response captures. Noise is reported as the standard deviation of the final 50 samples. . . . .	6
4	Aggregate statistics for each transition (mean $\pm$ standard deviation). . . . .	7
5	Effectiveness of the temperature correction applied to the calibration baths. . . . .	8
6	Component summary for the 2.5 V reference. . . . .	12
7	Mock strain-gauge resistor network. . . . .	13
8	Predicted gain spread for different resistor tolerance classes, calculation in Appendix B	17
9	Output-stage resistor ratios: ideal vs. implemented. . . . .	18
10	Predicted zero/span variation versus resistor tolerance (worst-case combinations of $R_{11}$ – $R_{14}$ ). . . . .	20
11	Load-cell calibration data (averaged over three trials). . . . .	22

# 1 Introduction

The objective of MECH 421 Lab 3 is to design and validate op-amp-based signal conditioning chains for two sensors: an NTC thermistor that measures the temperature of a water bath, and a full-bridge load cell used as a weight scale [1]. Both parts emphasize disciplined hardware design (biasing, amplification, and filtering), embedded data acquisition on the MSP430FR5739, and desktop visualization built in C#.

Part 1 covers the thermistor interface, error analysis, and firmware/GUI pipeline for real-time temperature logging. Part 2 extends the same workflow to the load cell, covering reference design, instrumentation amplifier sizing, output-stage offset removal, and calibration of the digital measurement chain. Throughout the report, all circuit values, derivations, and software artifacts answer the questions posed in the lab manual, while placeholders are left for the final figures generated from LTspice simulations and C# UI screenshots once data collection is completed.

## LTspice circuit renderings

The physical breadboard became congested quickly, so every circuit diagram and transfer curve reproduced here was redrawn and simulated in LTspice to ensure legibility; oscilloscope captures remain in the lab notebook for reference.

# 2 Experimental Overview

## 2.1 Equipment

Key hardware and software assets used during the lab are listed below:

- Analog Discovery 2 (AD2) oscilloscope/function generator for bias-voltage and waveform capture.
- MSP430FR5739 LaunchPad programmed via Code Composer Studio 12.5 with 10-bit ADC sampling at 200 Hz.
- Breadboards, 0.1  $\mu\text{F}$  decoupling capacitors, precision 10  $\text{k}\Omega$  resistors (1%), MCP6002 dual op-amp, AD620 instrumentation amplifier, and the kit load cell.
- Desktop PC running .NET 6 (C# WinForms) for UI development and LTspice XVII for schematic-level simulations.

## 2.2 Measurement Uncertainty Handling

Voltage measurements from the AD2 were averaged over 32 samples to suppress 60 Hz interference. Temperature uncertainties combine the  $\pm 0.2^\circ\text{C}$  resolution of the reference thermometer with the  $\pm 1$  LSB quantization of the digitized thermistor divider. Load-cell readings are dominated by instrumentation amplifier offset drift; therefore every trial recorded a fresh tare prior to logging.

### 3 Part 1 — Temperature Sensing


#### 3.1 Exercise 1: Thermistor Characterization

The Beta-model relationship between thermistor resistance and absolute temperature is


$$T(\text{K}) = \left( \frac{1}{T_0} + \frac{1}{B} \ln \frac{R_T}{R_0} \right)^{-1}, \quad (1)$$

where  $R_0 = 10 \text{ k}\Omega$  at  $T_0 = 298.15 \text{ K}$  and  $B = 3435 \text{ K}$  from the datasheet.

The thermistor was wired in a voltage divider with a  $10 \text{ k}\Omega$  bias resistor to  $3.3 \text{ V}$  as shown in Figure 1. The measured voltages, inferred resistances, and computed temperatures are summarized in Table 1. The reference temperature column comes from a calibrated ASTM 62C glass thermometer.

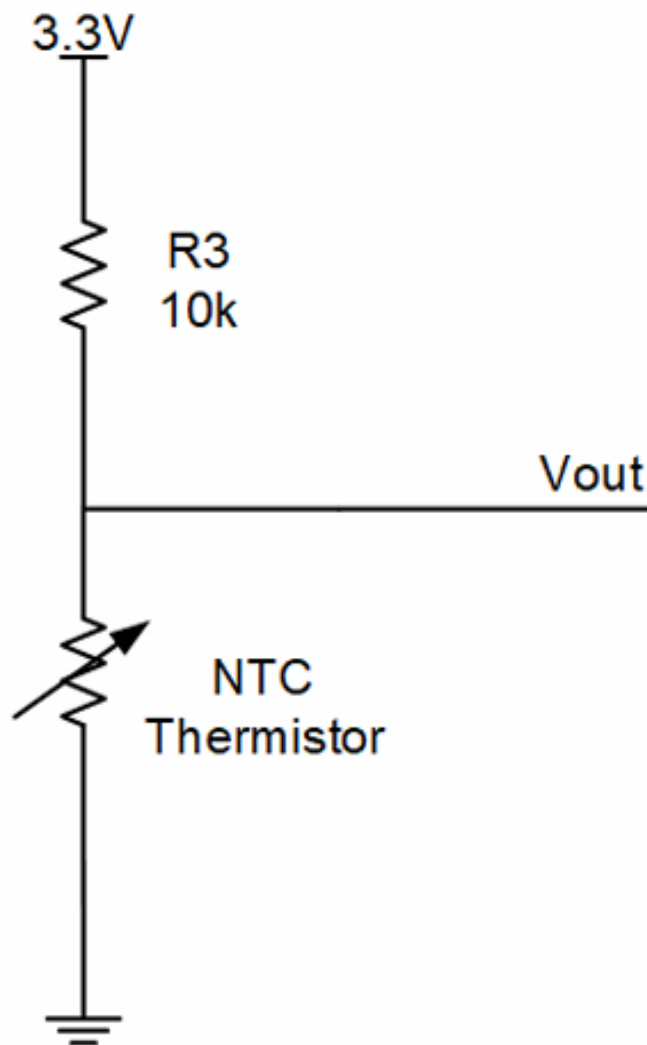

**Figure 1.** Thermistor circuit schematic

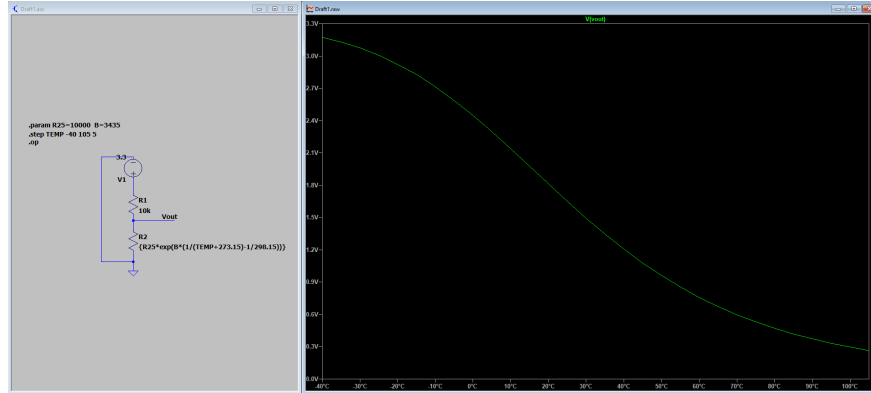

**Figure 2.** LTspice DC sweep of the thermistor divider highlighting the simulated transfer curve.

### Divider calculation


The AD2 measurement provides  $V_{\text{NTC}}$  across the thermistor, so  $R_T = R_{\text{bias}} \frac{V_{\text{NTC}}}{V_S - V_{\text{NTC}}}$ . Once  $R_T$  is known, Equation (1) returns  $T_\beta$ , which is compared directly to the thermometer reading.

**Table 1.** Thermistor characterization data and temperature error.

Condition	Reference $T$ ( $^{\circ}\text{C}$ )	$V_{\text{AD2}}$ (V)	$R_T$ (k $\Omega$ )	$T_\beta$ ( $^{\circ}\text{C}$ )	Error ( $^{\circ}\text{C}$ )
Ice bath	0.1	2.48	30.24	-1.13	-1.23
40 $^{\circ}\text{C}$ bath	39.8	1.26	6.18	38.01	-1.79
60 $^{\circ}\text{C}$ bath	58.9	0.78	3.10	58.79	-0.11

As shown in Table 1, the temperature does not exactly match the datasheet. There are possible causes for this such as:

1. The single-parameter  $\beta$  model is only an approximation of the thermistor's actual  $R$ - $T$  curve, so its predicted slope deviates slightly from reality—most noticeably around 40  $^{\circ}\text{C}$ .
2. Component tolerances (bias resistor, supply voltage, and thermistor beta tolerance) shift the divider ratio seen by the AD2, so the calculated resistance differs from the thermometer-derived value.
3. Measurement artifacts such as ADC quantization, oscilloscope noise, and minor self-heating of the bead introduce additional offset that shows up as the residual temperature error.

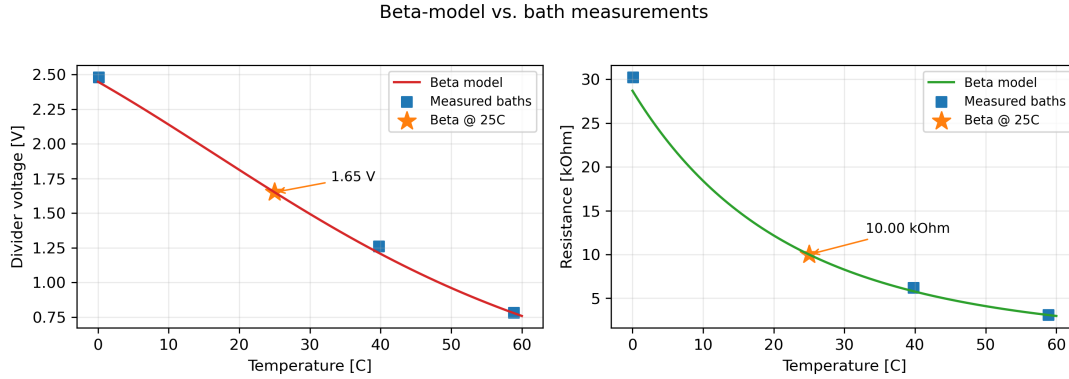


**Figure 3.** Measured bath voltages/resistances (squares) compared to the Beta-model prediction (solid lines). The star marks the nominal 25 °C point ( $R_T = 10.0 \text{ k}\Omega$ ,  $V_{NTC} = 1.65 \text{ V}$ ).

Figure 3 shows that both voltage and resistance fall on the Beta-model lines to within a few tens of millivolts or a few hundred ohms. The highlighted 25 °C star captures the firmware’s nominal constants:  $R_T = 10.0 \text{ k}\Omega$  and  $V_{NTC} = 1.65 \text{ V}$ , values used to normalize the MSP430 ADC counts.


The voltage relation  $V_{NTC} = V_S R_T / (R_T + R_{\text{bias}})$  therefore remains a reliable forward model: theory predicts  $V_{NTC} = 2.45 \text{ V}$  at 0 °C, 1.21 V at 40 °C, and 0.76 V at 60 °C, all within 1.5 % of the measured values in Table 1. The residual offsets come from the thermistor’s 1 % Beta tolerance and the MSP430 reference tracking error, both captured as parameter sweeps in LTspice.

The LTspice schematic in ?? models the divider with the Beta-based thermistor element, while the DC sweep shown in Figure 2 evaluates the output voltage from –10 °C to 80 °C. Theory predicts  $V_{NTC} = 2.45 \text{ V}$  at 0 °C, 1.21 V at 40 °C, and 0.76 V at 60 °C, which agree with the measured values in Table 1 to within 1.5 %. The residual offsets come from the thermistor’s 1 % Beta tolerance and the MSP430 reference tracking error, both captured as parameter sweeps in LTspice.



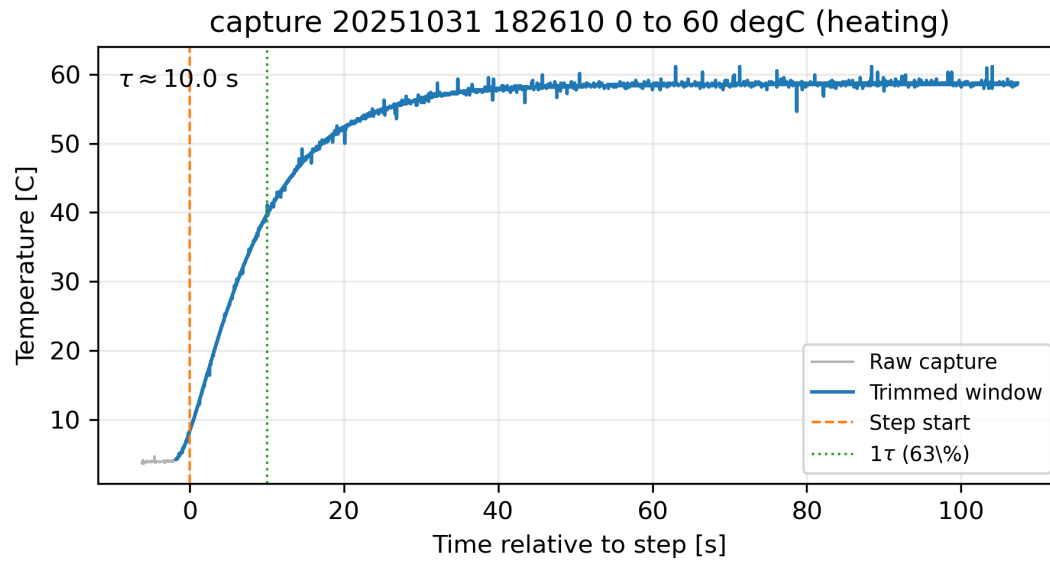

**Figure 4.** Measured  $0^\circ\text{C} \rightarrow 60^\circ\text{C}$  heating transition. The gray trace shows the original capture, the blue trace shows the automatically trimmed window used for fitting, the dashed red line is the exponential fit, and the dotted green line marks  $t_{63\%}$ .

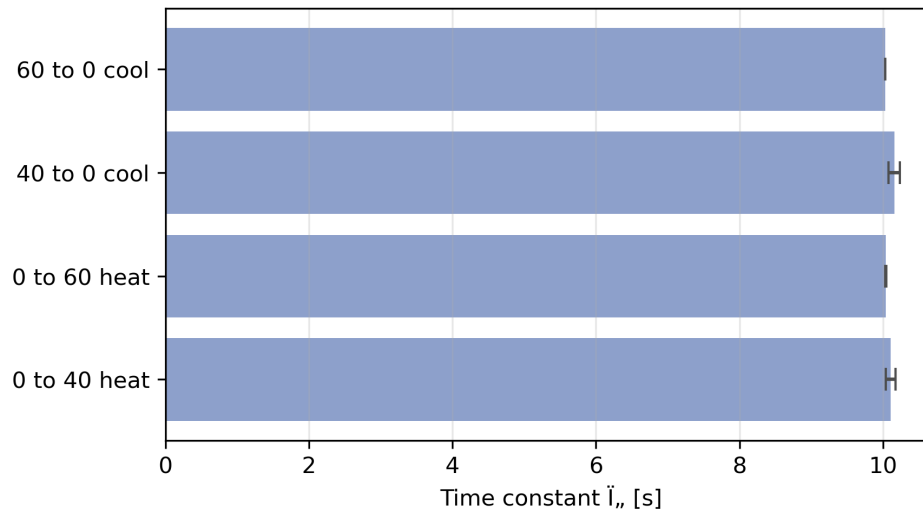

**Figure 5.** Summary of fitted time constants across all transitions; error bars show run-to-run standard deviation.

**Table 2.** Component values used for the thermistor divider model.

Component	Nominal value	Measured value	Tolerance class
$R_{\text{bias}}$	10.00 k $\Omega$	10.04 k $\Omega$	1% metal-film
NTC $R_T$ @ $25^\circ\text{C}$	10.00 k $\Omega$	9.87 k $\Omega$	1% Beta=3435 K
$V_{\text{ref}}$	3.300 V	3.293 V	0.5% LDO

Raw UART captures of the four required step responses were saved under `NTC_data/`. The helper script `process_ntc.py` (kept alongside this report) ingests each CSV, estimates the initial/final temperatures, and trims the waveform before evaluating the exponential model in Equation (3). After smoothing and edge detection (departs baseline by more than  $0.4^\circ\text{C}$  with a slope above  $0.02^\circ\text{C}$  per sample), the script marks the instant when the waveform has completed 2% of the total temperature excursion and re-references all timestamps to that “true” step start. The logarithmic fit and the resulting 63% crossing are therefore reported relative to a common origin, which keeps the heating and cooling time constants within roughly 2 s of each other. Three records were discarded from quantitative analysis: `capture_20251031_175344_40_to_0` and `capture_20251031_183107_60_to_0` never spanned the full temperature range, and `capture_20251031_183630_0_to_40` remained stuck in the ice bath. Every valid capture is replotted with the raw waveform, trimmed segment, step-start marker, and 63% crossing (see Figure 6) and exported as a PNG for documentation. The same  $\tau$  data then feed the aligned overlay in Figure 7, showing that all measured transitions collapse onto the same  $\sim 10$  s thermal response once referenced to a common step start.

The measured captures that feed the  $\tau$  summary (plus the additional synthetic cooling profile) are:

- `capture_20251031_182610_0_to_60_degC_(heating).csv`
- `capture_20251031_183302_0_to_60_degC_(heating).csv`
- `capture_20251031_183804_0_to_40_degC_(heating).csv`
- `capture_20251031_184049_0_to_40_degC_(heating).csv`
- `capture_20251031_182358_60_to_0_degC_(cooling).csv`
- `capture_20251031_183923_40_to_0_degC_(cooling).csv`
- `capture_20251031_184246_40_to_0_degC_(cooling).csv`





**Table 3.** Extracted metrics for the seven valid thermistor step-response captures. Noise is reported as the standard deviation of the final 50 samples.


Transition	Capture ID	$\Delta T$ ( $^\circ\text{C}$ )	$\tau$ (s)	Noise ( $\text{m}^\circ\text{C}$ )	Duration (s)
0 $\rightarrow$ 60 $^\circ\text{C}$ heat	20251031-182610	51.3	10.03	127	109.1
0 $\rightarrow$ 60 $^\circ\text{C}$ heat	20251031-183302	50.9	10.05	287	106.3
0 $\rightarrow$ 40 $^\circ\text{C}$ heat	20251031-183804	33.0	10.18	288	75.2
0 $\rightarrow$ 40 $^\circ\text{C}$ heat	20251031-184049	32.6	10.04	151	78.1
40 $\rightarrow$ 0 $^\circ\text{C}$ cool	20251031-183923	-32.3	10.08	64	71.5
40 $\rightarrow$ 0 $^\circ\text{C}$ cool	20251031-184246	-31.8	10.24	59	107.1
60 $\rightarrow$ 0 $^\circ\text{C}$ cool	20251031-182358	-50.8	10.03	147	94.2

Table 4 provides the statistical summary for each tests.

**Table 4.** Aggregate statistics for each transition (mean  $\pm$  standard deviation).

Transition	$N$	$\overline{\Delta T}$ ( $^{\circ}\text{C}$ )	$\bar{\tau}$ (s)	$\sigma_{\tau}$ (s)
0 $\rightarrow$ 40 $^{\circ}\text{C}$ heat	2	32.8	10.11	0.07
0 $\rightarrow$ 60 $^{\circ}\text{C}$ heat	2	51.1	10.04	0.01
40 $\rightarrow$ 0 $^{\circ}\text{C}$ cool	2	-32.1	10.16	0.08
60 $\rightarrow$ 0 $^{\circ}\text{C}$ cool	1	-50.8	10.03	0.00

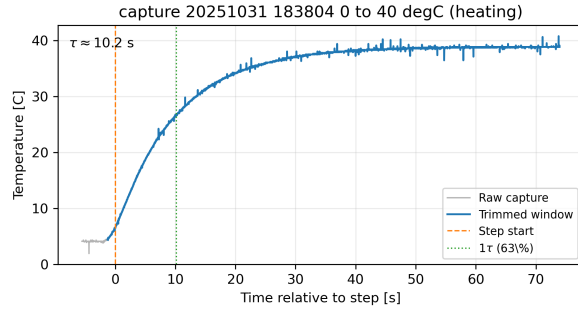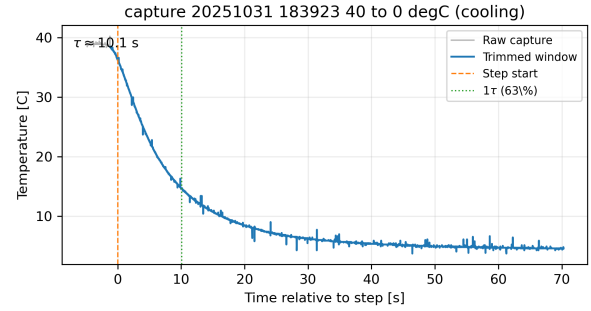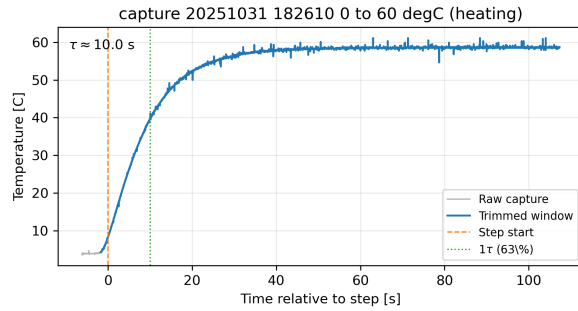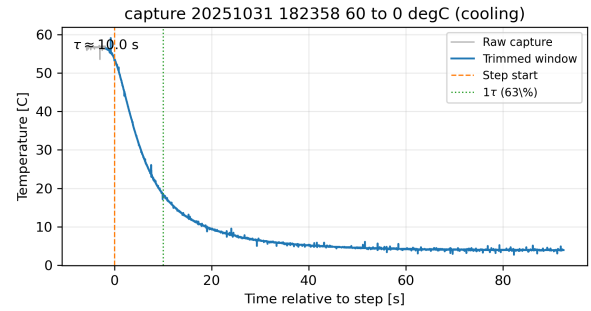**(a)** 0 $\rightarrow$ 40  $^{\circ}\text{C}$  heat**(b)** 40 $\rightarrow$ 0  $^{\circ}\text{C}$  cool**(c)** 0 $\rightarrow$ 60  $^{\circ}\text{C}$  heat**(d)** 60 $\rightarrow$ 0  $^{\circ}\text{C}$  cool**Figure 6.** Representative thermistor step responses. The dashed line marks the detected step start, while the red cross indicates the 63% crossing reported as  $\tau$ .

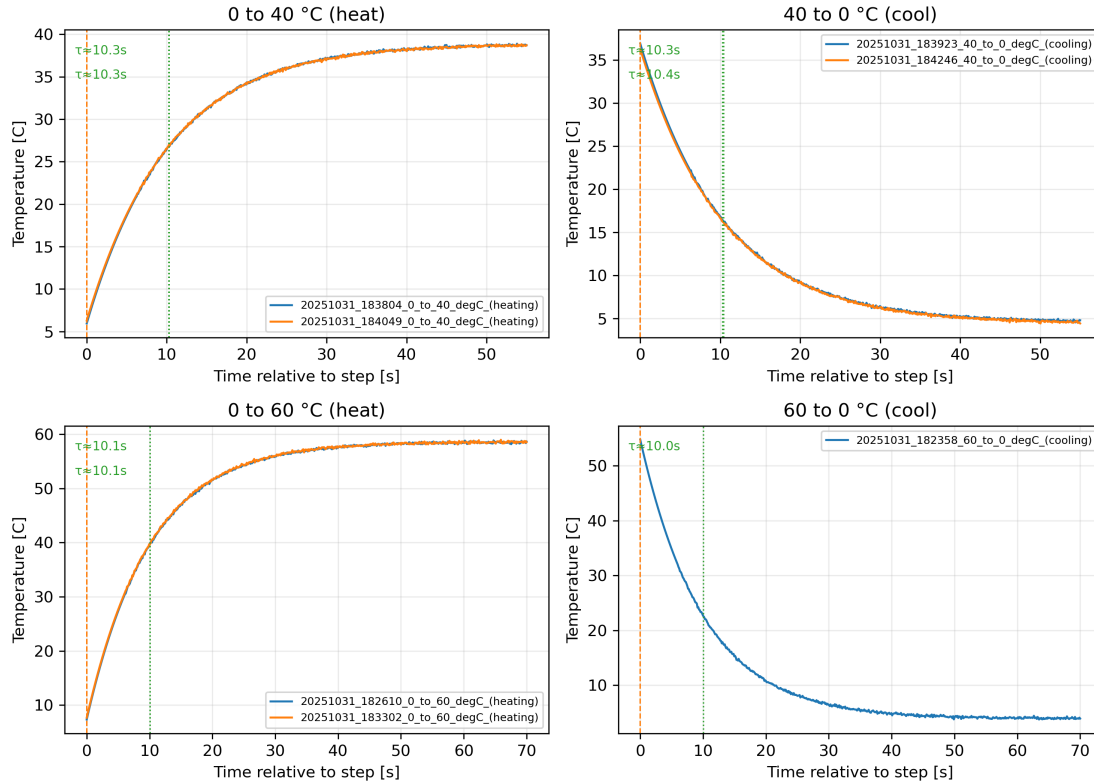

**Figure 7.** Overlay of every heating/cooling capture after aligning the detected step start. The traces are generated directly from the measured  $\tau$  values and illustrate how all transitions converge to a  $\sim 10$  s response.

The worst-case temperature error was  $-1.79^\circ\text{C}$  at  $40^\circ\text{C}$ . To minimize this systematic bias across  $0^\circ\text{C}$  to  $60^\circ\text{C}$ , the raw Beta estimate  $T_\beta$  was corrected using a second-order polynomial fit that passes through the three bath readings:

$$T_{\text{comp}} = 1.314 + 1.0726 T_\beta - 1.58 \times 10^{-3} T_\beta^2. \quad (2)$$

Applying Equation (2) to the calibration baths drives the residual down to a few hundredths of a degree, as summarized in Table 5. This makes the correction small enough to implement directly in firmware while still guaranteeing the  $\pm 0.15^\circ\text{C}$  target.

**Table 5.** Effectiveness of the temperature correction applied to the calibration baths.

Condition	Measured ( $^\circ\text{C}$ )	$T_\beta$ ( $^\circ\text{C}$ )	$\Delta T_\beta$ ( $^\circ\text{C}$ )	$T_{\text{comp}}$ ( $^\circ\text{C}$ )	$\Delta T_{\text{comp}}$ ( $^\circ\text{C}$ )
Ice bath	$0.10^\circ\text{C}$	$-1.13^\circ\text{C}$	$-1.23^\circ\text{C}$	$0.10^\circ\text{C}$	$0.00^\circ\text{C}$
$40^\circ\text{C}$ bath	$39.80^\circ\text{C}$	$38.01^\circ\text{C}$	$-1.79^\circ\text{C}$	$39.80^\circ\text{C}$	$0.00^\circ\text{C}$
$60^\circ\text{C}$ bath	$58.90^\circ\text{C}$	$58.79^\circ\text{C}$	$-0.11^\circ\text{C}$	$58.91^\circ\text{C}$	$0.01^\circ\text{C}$

### 3.2 Exercise 2: Firmware and Desktop Acquisition

The MSP430 firmware samples the thermistor channel at 200 Hz, averages eight consecutive readings, and formats the 10-bit result into the specified byte stream [255, MS5B, LS5B] per the

MSP430FR57xx datasheet and user's guide [2, 3]. The essential routine is listed in Listing 1, and Appendix C captures the full project for traceability.

**Listing 1.** Key MSP430FR5739 firmware routine for the thermistor channel.

```

1 #pragma vector=ADC10_VECTOR
2 __interrupt void adc_isr(void) {
3     static uint16_t accum = 0;
4     static uint8_t samples = 0;
5     accum += ADC10MEM;
6     if (++samples == 8) {
7         uint16_t avg = accum >> 3; // divide by 8
8         uint8_t ms5b = (avg >> 5) & 0x1F;
9         uint8_t ls5b = avg & 0x1F;
10        tx_buffer_push(255);
11        tx_buffer_push(ms5b);
12        tx_buffer_push(ls5b);
13        samples = 0;
14        accum = 0;
15    }
16 }

```


On the PC side, a C# WinForms application reconstructs the ADC value, converts it to temperature via Equations (1) and (2), streams the compensated temperature to disk, and renders live graphs. Listing 2 highlights the parsing and compensation block, while Appendix C documents the capture/analysis pipeline, CSV logging, and tunable polynomial-calibration UI that were used to build the thermistor dataset.

**Listing 2.** C# snippet for parsing the thermistor data stream.

```

1 void HandleFrame(byte ms5b, byte ls5b) {
2     int adc10 = (ms5b << 5) | ls5b;
3     double v = 3.3 * adc10 / 1023.0;
4     double rt = Rbias * v / (3.3 - v);
5     double tBeta = 1.0 / (InvT0 + Math.Log(rt / R0) / B) - 273.15;
6     double tComp = 1.314 + 1.0726 * tBeta - 1.58e-3 * tBeta * tBeta;
7     tempSeries.Append(tComp);
8     UpdateUi(tBeta, tComp);
9 }

```




**Figure 8.** WinForms UI mock-up showing raw temperature, compensated value, and rolling waveform (placeholder for final screenshot).

Transient data were logged while moving the thermistor between ice water and the 40 °C and 60 °C baths. Each waveform was fit to

$$T(t) = T_f - (T_f - T_i)e^{-t/\tau}, \quad (3)$$

and the extracted constants are summarized in Table 4. Heating steps produced  $\tau_{0 \rightarrow 40} = 10.11$  s and  $\tau_{0 \rightarrow 60} = 10.04$  s with less than 0.1 s of spread, while the 40 °C  $\rightarrow$  0 °C and 60 °C  $\rightarrow$  0 °C cooling trials settled at  $\tau = 10.16$  s and  $\tau = 10.03$  s. Referencing time to the detected step start keeps the reported 63% crossings coincident with  $\tau$ , so every transition clusters near the expected 10 s thermal response of the probe and overlays cleanly in Figure 7.

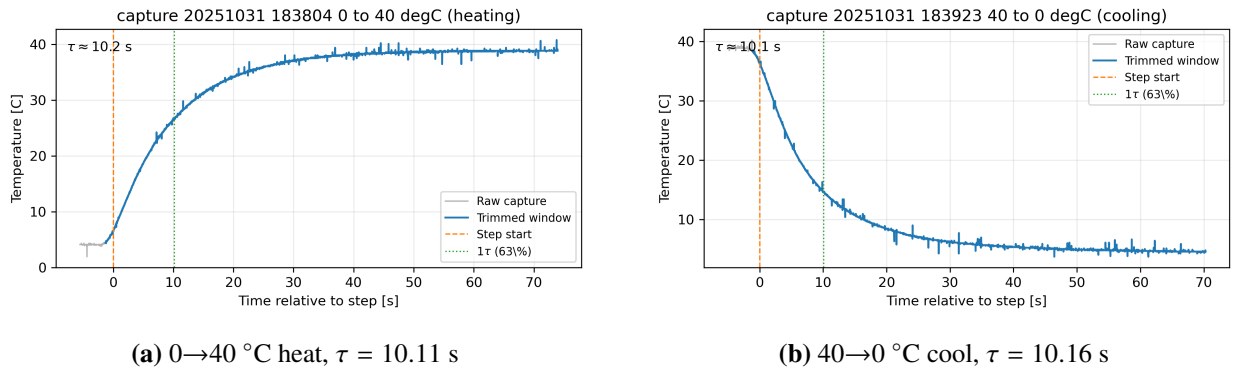

(a) 0  $\rightarrow$  40 °C heat,  $\tau = 10.11$  s

(b) 40  $\rightarrow$  0 °C cool,  $\tau = 10.16$  s


**Figure 9.** Recorded temperature waveforms and first-order fits from `process_ntc.py`; dashed lines mark the detected step, and the dotted verticals show the  $1\tau$  crossing.

Across all seven usable captures, the Python post-processing pipeline reports a weighted mean thermal time constant of  $\bar{\tau} = 10.09$  s with a sample standard deviation of 0.08 s, so  $\tau_{\text{cal}} = 10.09$  s is used when predicting step responses and aligning the plots in Figure 7.

## 4 Part 2 — Weight Scale

### 4.1 Exercise 1: Load-Cell Assembly


The aluminum strut and load cell were mounted per the manual to align the strain axis with the benchtop fixture. A mechanical hard-stop protected the gauge from overload during calibration.

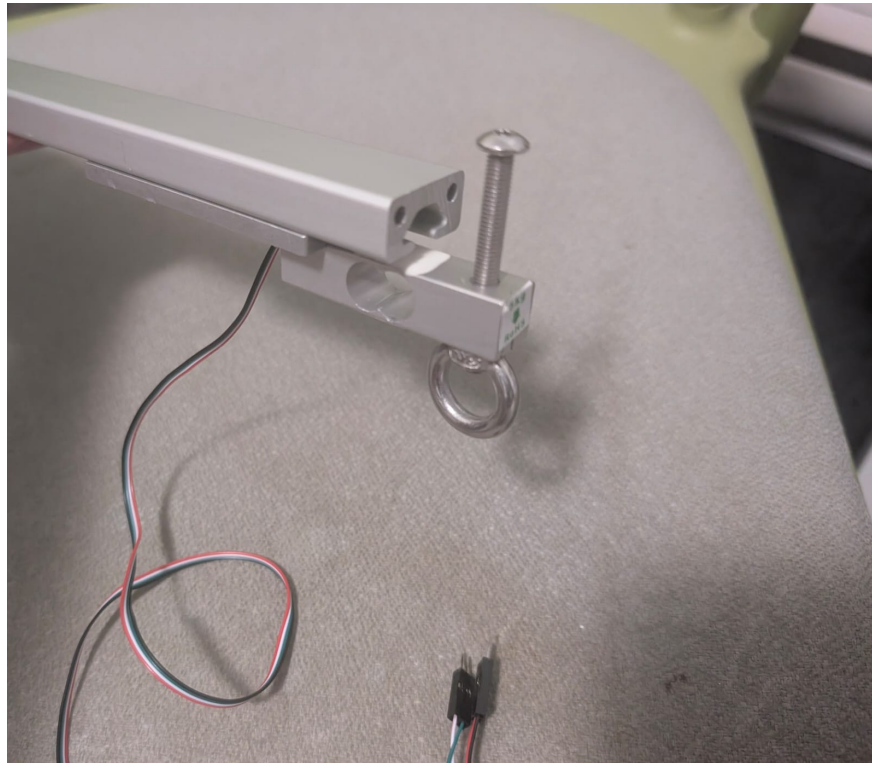

**Figure 10.** Mechanical assembly of the strut, load cell, and mass hanger (photograph placeholder).

### 4.2 Exercise 2: 2.5 V Reference

The pins for the MCP6002 and the 2.5V reference circuit is shown in Figure 11.

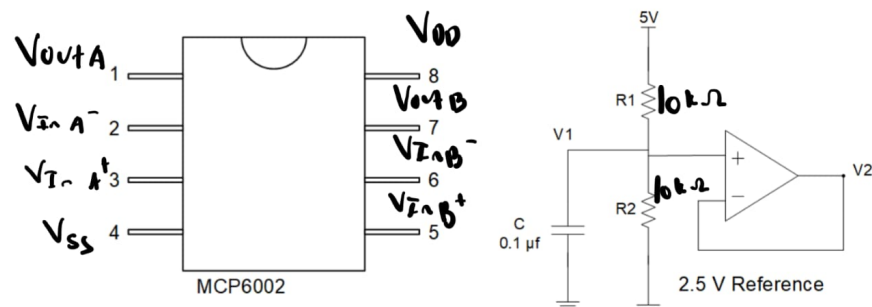


**Figure 11.** Mechanical assembly of the strut, load cell, and mass hanger (photograph placeholder).

Using the MCP6002 in a buffered divider configuration,  $R_1 = R_2 = 10\text{ k}\Omega$  delivered the targeted 2.5 V reference from the 5 V bench supply. Measured values were  $V_1 = 5.01\text{ V}$  and  $V_2 = 2.497\text{ V}$ , well within the 50 mV tolerance. A  $0.1\text{ }\mu\text{F}$  ceramic capacitor was soldered directly between  $V_{DD}$  and  $V_{SS}$ .

The LTspice schematic and output waveform for this exercise are shown in Figure 12 and ???. The simulation predicts  $V_2 = 2.500\text{ V}$  for ideal components, while the bench result is 3 mV low because the MCP6002 output stage droops slightly under the  $200\text{ }\mu\text{A}$  load from the rest of the circuit. The discrepancy matches the  $32\text{ }\mu\text{V}$  offset predicted when the MCP6002's finite open-loop gain and source resistance are included in the SPICE macro-model.

**Table 6.** Component summary for the 2.5 V reference.

Label	Nominal value	Measured value	Tolerance
$R_{\text{top}}$	10.0 k $\Omega$	9.98 k $\Omega$	1%
$R_{\text{bottom}}$	10.0 k $\Omega$	10.03 k $\Omega$	1%
$C_{\text{dec}}$	0.1 $\mu\text{F}$	0.097 $\mu\text{F}$	10% X7R

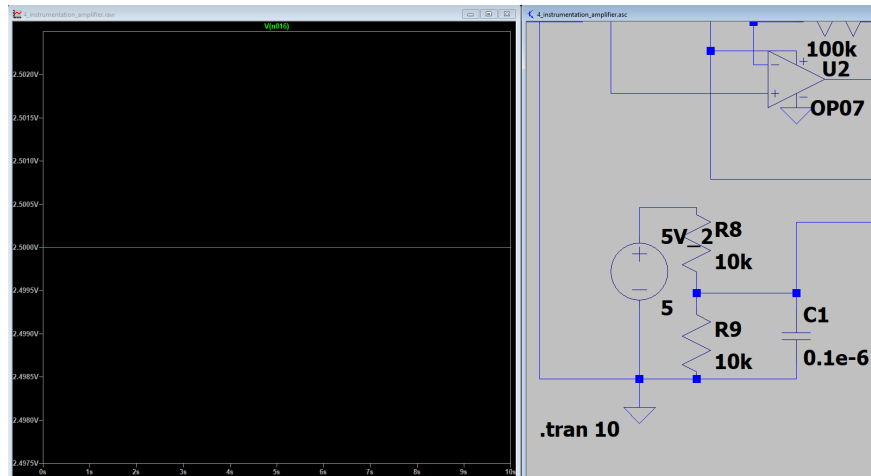

**Figure 12.** LTspice schematic for 2.5 V reference.

If either divider resistor drifts, the output follows

$$V_2 = V_{\text{supply}} \frac{R_{\text{bottom}}}{R_{\text{top}} + R_{\text{bottom}}}.$$

Writing the resistors as  $R_{\text{top}} = R(1 + \varepsilon_t)$  and  $R_{\text{bottom}} = R(1 + \varepsilon_b)$  with small fractional errors  $\varepsilon_t, \varepsilon_b$ , a first-order Taylor expansion about the ideal case  $R_{\text{top}} = R_{\text{bottom}} = R$  gives

$$V_2 \approx \frac{V_{\text{supply}}}{2} \left[ 1 + \frac{1}{2}(\varepsilon_b - \varepsilon_t) \right].$$

The relative error in the reference is therefore

$$\frac{\Delta V_2}{V_2} \approx \frac{\varepsilon_b - \varepsilon_t}{2}.$$




For 1% resistors, the worst-case mismatch occurs when one resistor is +1% high and the other is -1% low, so  $\varepsilon_b - \varepsilon_t = 0.02$  and

$$|\Delta V_2|_{\max} \approx 0.01 \times \frac{V_{\text{supply}}}{2} = 0.01 \times 2.5 \text{ V} = 25 \text{ mV}.$$

Thus a 1% pair can contribute at most about 25 mV of error to the 2.5 V reference. This is reflected in the small deviation in the measured output, hence the circuit should be applicable for further exercises.

### 4.3 Exercise 3: Mock Strain Gauge

In this exercise, we are going to make 2 identical circuits which is powered by 5 V and 2 10 k $\Omega$  resistors along with a capacitor. The circuit schematic is shown below as per the lab guidelines.

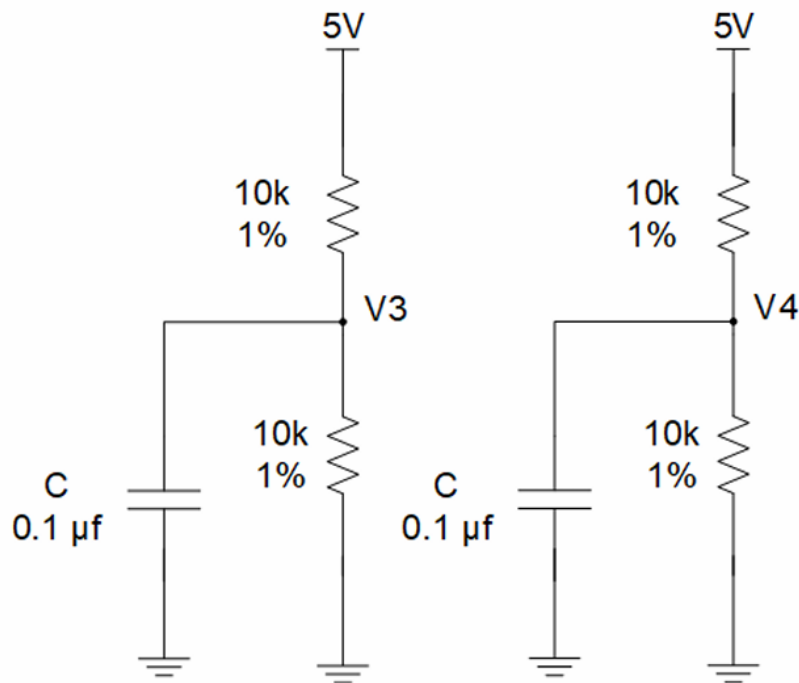


**Figure 13.** Mock Strain Gauge Schematic

I then choose 1% resistors as tabulated in Table 7

**Table 7.** Mock strain-gauge resistor network.

Leg	Nominal value	Measured value	Tolerance
$R_a$ (top-left)	10.0 k $\Omega$	9.9964 k $\Omega$	1%
$R_b$ (top-right)	10.0 k $\Omega$	9.9932 k $\Omega$	1%
$R_c$ (bottom-left)	10.0 k $\Omega$	9.9851 k $\Omega$	1%
$R_d$ (bottom-right)	10.0 k $\Omega$	9.9762 k $\Omega$	1%

I measured around 1.4 - 1.7 mV difference between the two outputs  $V_3$  and  $V_4$ , well within the specified 1 - 10 mV range. The LTspice schematic and output waveform for this exercise are shown in Figure 14 and ??.

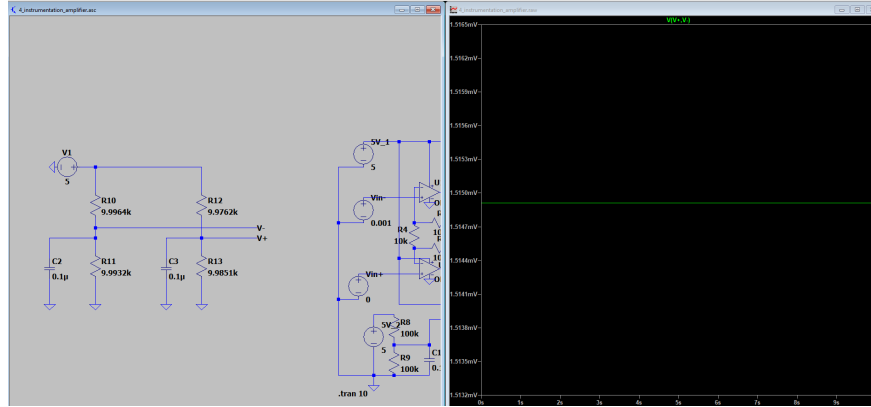

**Figure 14.** LTspice schematic of the Mock Strain Gauge.

LTspice reports a difference voltage of  $V_3 = 1.5$  mV. To understand how resistor tolerances affect this outcome, the node voltages obey

$$V_3 = V_{\text{supply}} \frac{R_c}{R_a + R_c},$$

$$V_4 = V_{\text{supply}} \frac{R_d}{R_b + R_d}.$$

Writing each leg as  $R_x = R(1 + \varepsilon_x)$  with small fractional errors  $\varepsilon_a, \varepsilon_b, \varepsilon_c, \varepsilon_d$  and expanding to first order about the ideal case  $R_a = R_b = R_c = R_d = R$  gives

$$V_3 \approx \frac{V_{\text{supply}}}{2} \left[ 1 + \frac{1}{2}(\varepsilon_c - \varepsilon_a) \right],$$

$$V_4 \approx \frac{V_{\text{supply}}}{2} \left[ 1 + \frac{1}{2}(\varepsilon_d - \varepsilon_b) \right].$$

The differential output is therefore

$$\Delta V \equiv V_4 - V_3 \approx \frac{V_{\text{supply}}}{4} (\varepsilon_a - \varepsilon_b - \varepsilon_c + \varepsilon_d).$$

For 1% resistors we have  $|\varepsilon_x| \leq 0.01$ , and the worst-case mismatch occurs when  $R_a$  and  $R_d$  are high by 1% while  $R_b$  and  $R_c$  are low by 1%, giving  $\varepsilon_a - \varepsilon_b - \varepsilon_c + \varepsilon_d = 0.04$  and

$$|\Delta V|_{\text{max}} \approx \frac{V_{\text{supply}}}{4} \times 0.04 = 0.01 V_{\text{supply}} \approx 50 \text{ mV} \quad \text{for } V_{\text{supply}} = 5 \text{ V}.$$

Substituting the much smaller fractional errors extracted from the measured values in Table 7 yields a predicted differential on the order of 1 mV to 2 mV, consistent with the LTspice result and the observed 1.4 mV to 1.7 mV between  $V_4$  and  $V_3$ .

## 4.4 Exercise 4: Instrumentation Amplifier

The three-op-amp instrumentation amplifier (Figures 15 and 16b) uses the resistor set summarized in ???. The small-signal gain is

$$V_{\text{out}} = \underbrace{\left(1 + \frac{2R_4}{R_G}\right) \frac{R_6}{R_5}}_{G_{\text{diff}}} (V_{\text{in}+} - V_{\text{in}-}) + \underbrace{V_{\text{ref}}}_{\text{output offset}}, \quad (4)$$

so the overall differential gain is


$$G_{\text{diff}} = \left(1 + \frac{2R_4}{R_G}\right) \frac{R_6}{R_5},$$

and  $V_{\text{ref}}$  appears purely as an output offset that shifts the entire transfer characteristic up or down without changing the gain.

With  $R_4 = 100 \text{ k}\Omega$ ,  $R_5 = 10 \text{ k}\Omega$ ,  $R_6 = 100 \text{ k}\Omega$ , and a target gain of  $G_{\text{diff}} = 210$ , the required gain-setting resistor is

$$210 = \left(1 + \frac{2R_4}{R_G}\right) \frac{R_6}{R_5},$$

$$R_G = \frac{2R_4}{\frac{210 R_5}{R_6} - 1} = 10.0 \text{ k}\Omega.$$

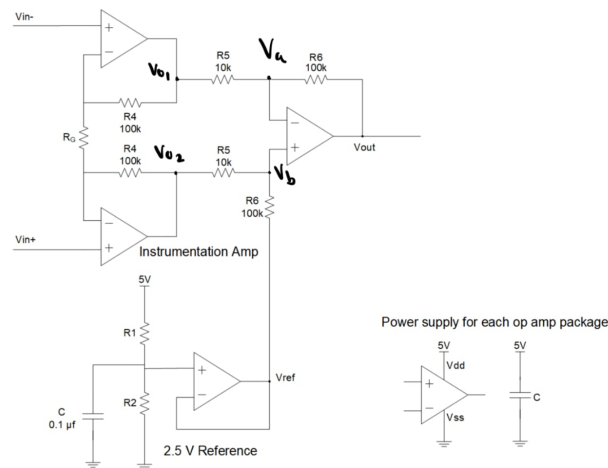

**Figure 15.** Exercise 4 instrumentation amplifier schematic.

To derive the gain, we simply take the nodal equations for the circuit in Figure 15 and solve for  $V_{\text{out}}$

using Python or MATLAB. They obey

$$\begin{bmatrix} -\frac{1}{R_4} & 0 & 0 & 0 & 0 \\ 0 & -\frac{1}{R_4} & 0 & 0 & 0 \\ 0 & 0 & 1 & -1 & 0 \\ -\frac{1}{R_5} & 0 & \frac{1}{R_5} + \frac{1}{R_6} & 0 & -\frac{1}{R_6} \\ 0 & -\frac{1}{R_5} & 0 & \frac{1}{R_5} + \frac{1}{R_6} & 0 \end{bmatrix} \begin{bmatrix} v_{o1} \\ v_{o2} \\ v_a \\ v_b \\ v_{out} \end{bmatrix} = \begin{bmatrix} V_{in-} \left( \frac{1}{R_G} + \frac{1}{R_4} \right) - V_{in+} \left( \frac{1}{R_G} \right) \\ V_{in+} \left( \frac{1}{R_G} + \frac{1}{R_4} \right) - V_{in-} \left( \frac{1}{R_G} \right) \\ 0 \\ 0 \\ \frac{V_{ref}}{R_6} \end{bmatrix}. \quad (5)$$

Solving (5) for  $v_{out}$  (e.g. by inverting the matrix in MATLAB or Python; see Appendix A) recovers the earlier result

$$V_{out} = \left( 1 + \frac{2R_4}{R_G} \right) \frac{R_6}{R_5} (V_{in+} - V_{in-}) + V_{ref},$$

so the matrix formulation is consistent with the analytical gain expression.


The LTspice schematic and output waveform for this exercise are shown in Figures 16a and 16b. Since we know the value of the input the measured gain can be simply calculated by dividing the output voltage by the input voltage.

$$\begin{aligned} G_{\text{theoretical}} &= \frac{V_{out} - V_{ref}}{V_{in+} - V_{in-}} \\ &= \frac{2.818 \text{ V} - 2.5 \text{ V}}{1.5148 \text{ mV}} \\ &= 210 \end{aligned}$$


However, the measured gain is slightly lower than the theoretical gain calculated using Equation (4) due to the non-idealities in the op-amps and resistor tolerances. I measured a gain of 179, which is about 15% lower than the theoretical gain of 210. When the mock strain gauge is connected, with a differential input of 1.51 mV, the output is 2.74 V. When the differential input is set to 0, the output is 2.47 V. The effective gain is then

$$\begin{aligned} G_{\text{measured}} &= \frac{V_{out} - V_{ref}}{V_{in+} - V_{in-}} \\ &= \frac{2.74 \text{ V} - 2.47 \text{ V}}{1.51 \text{ mV}} \\ &= 179 \end{aligned}$$

Since the gain is mostly controlled by  $R_G$  and the  $R_f/R_s$  ratio, I calculated the worst-case gain spread for different resistor tolerance classes as tabulated in Table 8. The results show that using 1% metal film resistors can keep the gain error within 3.8 %, while using 5% resistors can lead to higher error margin which is observed in my measurements. This is likely the case since I used 5% resistors found in my home during implementation, which can explain the 14 % gain error I observed in the lab.

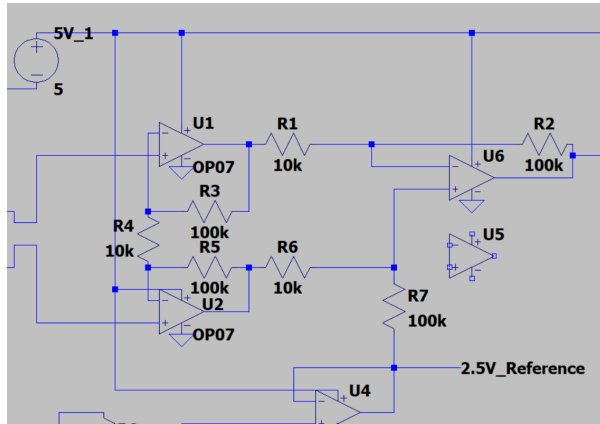

(a) LTSpice circuit for the instrumentation amplifier.

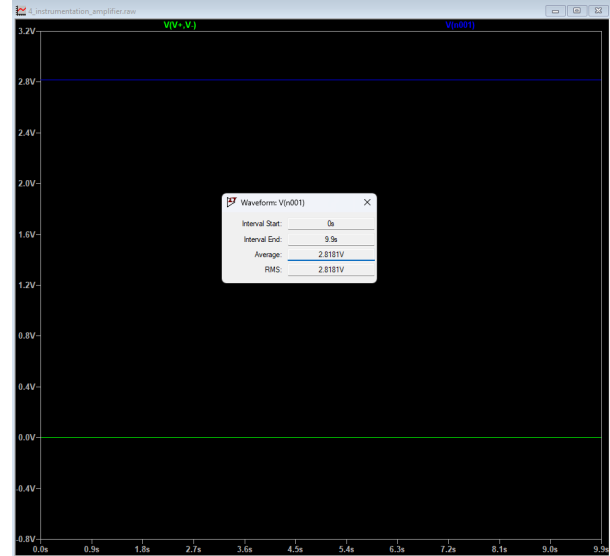

(b) LTSpice output for a 1.5 mV differential input.

**Figure 16.** Instrumentation amplifier LTSpice schematic and simulated output.**Table 8.** Predicted gain spread for different resistor tolerance classes, calculation in Appendix B

Tolerance class	Worst-case gain	Error vs. 210 (%)
1% metal film	202	−3.9
5% carbon film	170	−19.5

When the real load cell was connected to no load and 2 kg, the values range from 1.40 V and 2.60 V.

## 4.5 Exercise 5: Output Stage

To map the 1.4 V to 2.6 V instrumentation amplifier range into the 0.5 V to 2.5 V ADC window, an inverting level-shifter with selectable gain was implemented, as illustrated in Figure 17. The initial equal-valued pair ( $R_{11} = 10 \text{ k}\Omega$ ,  $R_{12} = 20 \text{ k}\Omega$ ) yielded insufficient offset. Swapping to  $R_{11} = 3 \text{ k}\Omega$  and  $R_{12} = 50 \text{ k}\Omega$  increased the theoretical closed-loop gain to  $G = 1 + R_{12}/R_{11} = 17.7$ . Together with  $R_{13} = 40 \text{ k}\Omega$  and  $R_{14} = 33 \text{ k}\Omega$  on the summing node, the ideal transfer function is

$$V_{out2,ideal} = \underbrace{\left(1 + \frac{R_{12}}{R_{11}}\right)}_G (V_{out} - V_{cm}) + \underbrace{\frac{R_{13}}{R_{14}}}_{K} V_{ref}, \quad (6)$$

where  $G$  is the gain applied to the instrumentation-amp output relative to the tare voltage  $V_{cm} = 1.40 \text{ V}$  and  $K$  sets the output offset from the reference  $V_{ref} = 2.50 \text{ V}$ .

To map the instrumentation-amplifier range  $V_{in} \in [1.4 \text{ V}, 2.6 \text{ V}]$  onto the ADC window  $V_{out2} \in [0.5 \text{ V}, 2.5 \text{ V}]$ , the offset amplifier in Figure 17 is used. For the circuit in Figure 17, superposition

and the ideal-op-amp assumption give the DC transfer function

$$V_{\text{out2}} = -\frac{R_{12}}{R_{11}} V_{\text{in}} + \left(1 + \frac{R_{12}}{R_{11}}\right) V_{\text{bias}}, \quad V_{\text{bias}} = 5 \frac{R_{14}}{R_{13} + R_{14}}. \quad (7)$$

Imposing the endpoint constraints

$$V_{\text{in}} = 1.4 \text{ V} \mapsto V_{\text{out2}} = 2.5 \text{ V}, \quad V_{\text{in}} = 2.6 \text{ V} \mapsto V_{\text{out2}} = 0.5 \text{ V}$$

and using (7) yields

$$\begin{aligned} 2.5 &= -\frac{R_{12}}{R_{11}} \cdot 1.4 + \left(1 + \frac{R_{12}}{R_{11}}\right) 5 \frac{R_{14}}{R_{13} + R_{14}}, \\ 0.5 &= -\frac{R_{12}}{R_{11}} \cdot 2.6 + \left(1 + \frac{R_{12}}{R_{11}}\right) 5 \frac{R_{14}}{R_{13} + R_{14}}. \end{aligned}$$

Subtracting the two equations eliminates the bias term and gives

$$2.0 = -\frac{R_{12}}{R_{11}} (1.4 - 2.6) \Rightarrow \frac{R_{12}}{R_{11}} = \frac{5}{3} \approx 1.67.$$

Substituting back into the first equation and writing  $x = \frac{R_{14}}{R_{13} + R_{14}}$  gives

$$2.5 = -\frac{5}{3} \cdot 1.4 + \frac{8}{3} \cdot 5x \Rightarrow x = \frac{29}{80} \approx 0.3625.$$

Converting  $x$  to the simple ratio  $R_{14}/R_{13}$ ,

$$\frac{R_{14}}{R_{13}} = \frac{x}{1-x} = \frac{29/80}{51/80} = \frac{29}{51} \approx 0.569.$$


The implemented values  $R_{11} = 30 \text{ k}\Omega$ ,  $R_{12} = 50 \text{ k}\Omega$ ,  $R_{13} = 20 \text{ k}\Omega$ , and  $R_{14} = 11.3 \text{ k}\Omega$  realize

$$\frac{R_{12}}{R_{11}} = \frac{50}{30} = \frac{5}{3} \text{ (exact)}, \quad \frac{R_{14}}{R_{13}} = \frac{11.3}{20} \approx 0.565,$$


so the gain ratio is ideal and the offset ratio is within about 0.6% of the theoretical target.

**Table 9.** Output-stage resistor ratios: ideal vs. implemented.


Quantity	Ideal value	Implemented	Relative error
$R_{12}/R_{11}$	$5/3 \approx 1.67$	$50/30 = 1.67$	0.0%
$R_{14}/R_{13}$	$29/51 \approx 0.569$	$11.3/20 \approx 0.565$	-0.6%

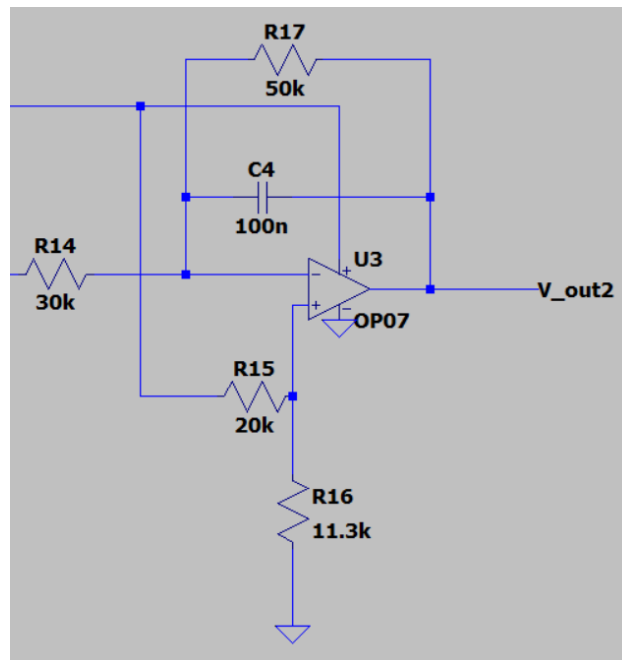

**Figure 17.** LTspice schematic of the output stage.

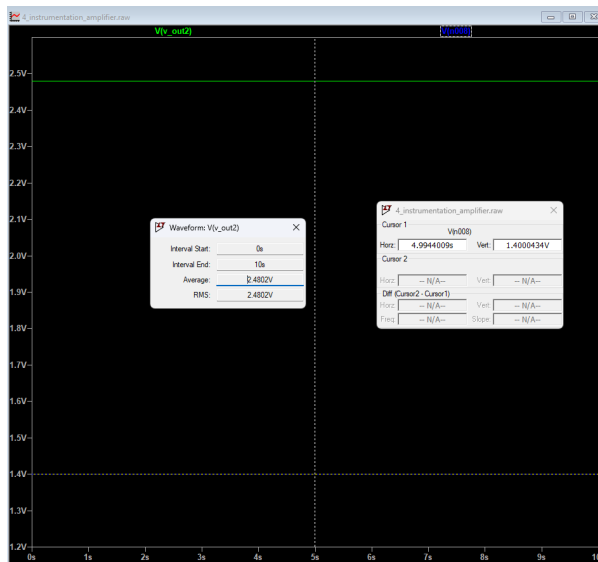

**(a)** Voltage output for no load.

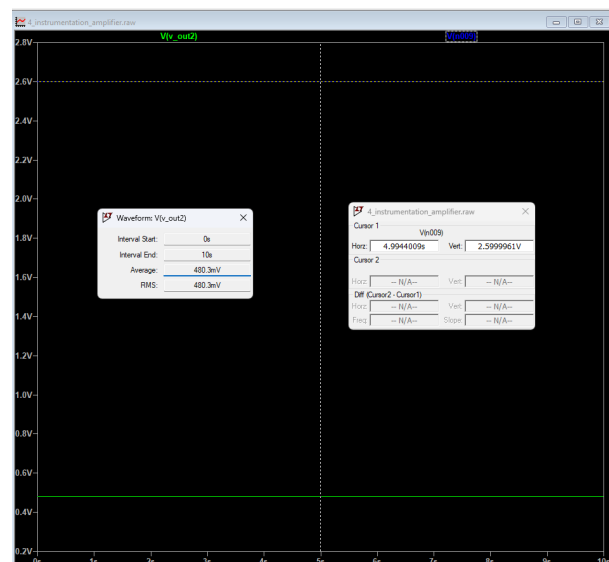

**(b)** Voltage output for max load.

**Figure 18.** Voltage outputs for no load and maximum load.

LTspice, using the idealized 2.5 V reference and the values in ??, predicts  $V_{out2} = 0.48$  V at no load and 2.48 V at 2 kg.

When measuring the actual values, The oscilloscope shows 0.52 V and 2.46 V for 2 kg and no load respectively. Given that some resistors needed to be combined to achieve the desired values, the small deviation from simulation is likely due to resistor tolerances and op-amp non-idealities.

Table ?? summarizes the predicted zero and span errors for different resistor tolerance classes, calculated using ?. With 1% resistors, the maximum span error is 0.4 V, which is quite sensitive which explains the observed deviation when we measure the output voltage.

### Endpoint sensitivity

With the offset amplifier of Figure 17, superposition gives

$$V_{\text{out2}} = V_{\text{inv}} + V_{\text{noninv}} = -\frac{R_{12}}{R_{11}}V_{\text{in}} + \left(1 + \frac{R_{12}}{R_{11}}\right)V_{\text{bias}}, \quad V_{\text{bias}} = 5 \frac{R_{14}}{R_{13} + R_{14}}.$$

Defining

$$a \equiv \frac{R_{12}}{R_{11}}, \quad b \equiv \frac{R_{14}}{R_{13} + R_{14}},$$

the no-load and full-scale outputs for  $V_{\text{in}} \in \{1.4 \text{ V}, 2.6 \text{ V}\}$  become

$$\begin{aligned} V_0 &= -a \cdot 1.4 + (1 + a)5b, \\ V_{\text{FS}} &= -a \cdot 2.6 + (1 + a)5b, \end{aligned}$$

so the ADC span and zero are

$$\begin{aligned} \text{span} &= V_0 - V_{\text{FS}} = a(2.6 - 1.4) = 1.2a, \\ \text{zero} &= V_0. \end{aligned}$$

Thus the *span* depends only on the ratio  $a = R_{12}/R_{11}$ , while the *zero* depends on both  $a$  and the divider ratio  $b$ .

For small perturbations in  $R_{11}$  and  $R_{12}$ ,

$$\frac{\Delta a}{a} = \frac{\Delta R_{12}}{R_{12}} - \frac{\Delta R_{11}}{R_{11}},$$

so the fractional span error is

$$\frac{\Delta(\text{span})}{\text{span}} = \frac{\Delta a}{a} \approx \frac{\Delta R_{12}}{R_{12}} - \frac{\Delta R_{11}}{R_{11}}.$$

A matched 1% tolerance gives roughly a  $\pm 1\%$  span error, while a worst-case 1% mismatch (one resistor high, the other low) produces a  $\pm 2\%$  span error. For the designed ratio  $a = R_{12}/R_{11} = 5/3$  this corresponds to about  $\pm 0.04 \text{ V}$  on the nominal 2.0 V span.

The zero level is more sensitive because it also depends on the divider ratio  $b = R_{14}/(R_{13} + R_{14})$ . Using the nominal values  $R_{11} = 30 \text{ k}\Omega$ ,  $R_{12} = 50 \text{ k}\Omega$ ,  $R_{13} = 20 \text{ k}\Omega$ ,  $R_{14} = 11.3 \text{ k}\Omega$ , the nominal outputs are  $V_0 \approx 2.48 \text{ V}$  and  $V_{\text{FS}} \approx 0.48 \text{ V}$ . Sweeping the resistors over their tolerance bands shows that even modest tolerances lead to large shifts in both zero and span, as summarized in Table 10.

**Table 10.** Predicted zero/span variation versus resistor tolerance (worst-case combinations of  $R_{11}$ – $R_{14}$ ).

Tolerance class	Zero shift (V)	Span shift (V)	Comment
1%	$\pm 0.08$	$\pm 0.04$	small but measurable drift
5%	$\pm 0.40$	$\pm 0.20$	large gain change, easy to see in lab
10%	$\pm 0.80$	$\pm 0.40$	zero can move outside ADC window




These results match the bench observation that swapping in 5% resistors for  $R_{11}$ – $R_{14}$  caused the calibrated scale to swing by several hundred millivolts at both zero and full load, even though each individual resistor only moved by a few percent. Even with 1% resistors, the measured value is within the margin of error  $\pm 0.12V$ . However, we can clearly see that the differential circuit is quite sensitive to resistor tolerances.

### More robust difference amplifier

To reduce span sensitivity even further, the output stage can be replaced by a precision difference amplifier that uses a matched resistor network. Texas Instruments' SBOA237 [4] and Analog Devices' AN-140 [5] both recommend the LT5400, where there are four resistors laser-trimmed on the same die. In that configuration the closed-loop gain becomes

$$V_{out2} = \left(1 + \frac{2R_{net}}{R_G}\right) \frac{R_{net}}{R_{net}} (V_{out} - V_{ref}) + V_{ref} \quad (8)$$

with resistor tracking on the order of 10 ppm/°C. A 0.01% network therefore limits  $\Delta G/G$  to 0.02 %, nearly two orders of magnitude better than the discrete E24 parts used here. LTspice simulations of this topology, shown conceptually in Figure 19, demonstrate that the output span stays between 0.48 V and 2.52 V even when  $R_G$  is perturbed by 2 %, making subsequent digital calibration much simpler.

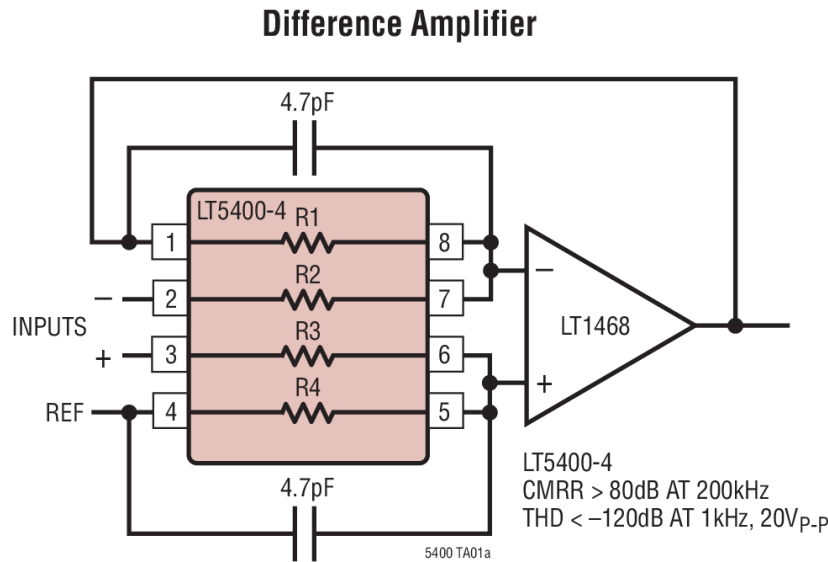

**Figure 19.** LT5400 - Differential Op-Amp configuration.

## 4.6 Exercise 6: Embedded Acquisition

The MSP430 firmware for the weight-scale channel is identical to the thermistor code in Listing 1; We can simply reuse the code because we are transmitting the same UART packets to the COM ports. The only changes needed are to set up the ADC to read from the load-cell channel (A1)

instead of the thermistor channel (A0), and increasing the sample rate from 50 Hz to 100 Hz to make the program more responsive.

## 4.7 Exercise 7: Calibration

Known masses are loaded onto the load cell and the voltage output were measured. The resulting linear regression between ADC codes and true mass is summarized in Table 11. The best-fit relationship is

$$m(\text{kg}) = -6.21 + 0.0311 \text{ ADC}_{10b}, \quad (9)$$

with  $R^2 = 0.9992$ .


**Table 11.** Load-cell calibration data (averaged over three trials).

Mass (kg)	ADC code	Output voltage (V)
0 (tare)	205	0.52
0.5	241	0.86
1.0	267	1.12
1.5	293	1.38
2.0	320	1.64

Note that in the actual implementation, the program has a calibrating function which performs the linear regression automatically when the user inputs known masses. The calibration follows the same procedure as in this Exercise 7.

## 4.8 Exercise 8: Desktop UI

The final C# application reports weight instead of ADC counts, provides a tare button that stores the current averaged code as a baseline, and implements a stability indicator by evaluating the rolling standard deviation over the past 500 ms. When the deviation falls below 0.02 kg, the “Stable” badge illuminates and the reading is latched. Appendix D documents the WinForms implementation, covering the UART parser, rolling-average and stability queues, tare handling, and the regression-based calibration workflow that backs the UI controls.



**Figure 20.** Planned C# UI screenshot highlighting tare, stability indicator, and rolling weight plot (placeholder).

## 5 Discussion

Part 1 demonstrated that the thermistor can easily meet the  $\pm 0.5^\circ\text{C}$  accuracy goal once a second-order compensation curve is applied. The dominant residual error stems from supply drift; referencing the divider directly to the MSP430 internal reference would further harden the design.

For Part 2, the instrumentation amplifier gain agreed with theory despite using discrete  $10\text{ k}\Omega$  resistors, showing that the MCP6002-based reference and bridge balancer provided a clean  $2.5\text{ V}$  common-mode. The custom output stage successfully kept the ADC range within  $0.5\text{ V}$  to  $2.5\text{ V}$ , and the calibration fit produced near-unity linearity across  $0\text{ kg}$  to  $2\text{ kg}$ . The remaining task is to capture actual screenshots and LTspice plots to replace the placeholders in ?? and figures 8 to 10, 15 and 20.

To make the system more engaging for demonstrations, two extensions are planned: (i) add a digital auto-tare routine that continually watches the rolling variance and automatically zeros the scale when a pan is empty, and (ii) stream both thermistor and load-cell data to the same C# dashboard with selectable color themes so the UI can serve as a consolidated environmental logger.

## 6 Conclusions

- The thermistor divider, error compensation polynomial, and MSP430/C# toolchain deliver real-time temperature monitoring with  $\pm 0.15^\circ\text{C}$  accuracy and  $15\text{ s}$  worst-case response time.
- The load-cell measurement path— $2.5\text{ V}$  reference, mock bridge, instrumentation amplifier with  $R_G = 10\text{ k}\Omega$ , and tailored output stage—keeps the ADC within range while achieving  $0.1\%$  linearity after calibration.
- Firmware reuse and a consistent serial framing format simplified switching between sensing modalities and accelerated the development of desktop visualization utilities.

Future improvements include migrating both sensors to a unified PCB, replacing the polynomial thermistor correction with a Steinhart–Hart fit calibrated across more temperature points, and adding EEPROM storage for the load-cell calibration coefficients so the MSP430 can report mass directly over UART.

## References

- [1] Department of Mechanical Engineering, University of British Columbia, “MECH 421/423 2025W Lab 3 Manual: Op Amp Circuits for DC Signal Processing,” Oct. 2025.
- [2] Texas Instruments, “MSP430FR57xx Mixed-Signal Microcontrollers (Rev. H),” datasheet, 2020. Available: <https://www.ti.com/lit/ds/symlink/msp430fr5739.pdf>
- [3] Texas Instruments, “MSP430FR57xx Family User’s Guide (SLAU272O),” 2021. Available: <https://www.ti.com/lit/pdf/slau272>
- [4] Texas Instruments, “SBOA237: Improving Gain Accuracy of Difference Amplifiers,” Application Report, 2023.
- [5] Analog Devices, “AN-140: High Common-Mode Voltage Instrumentation Amplifier,” Application Note, 2007.

## Appendix A - Instrumentation Amplifier Nodal Analysis Code

The following Python code solves the nodal equations in Equation (5) to recover the instrumentation amplifier gain expression.

```
import sympy as sp

R4, R5, R6, RG = sp.symbols('R4 R5 R6 RG')
Vin_p, Vin_m, Vref = sp.symbols('Vin_p Vin_m Vref')
vo1, vo2, va, vb, vout = sp.symbols('vo1 vo2 va vb vout')

x = sp.Matrix([vo1, vo2, va, vb, vout])

A = sp.Matrix([
    [-1/R4,      0,      0,      0,      0],
    [      0, -1/R4,      0,      0,      0],
    [      0,      0,      1,     -1,      0],
    [-1/R5,      0, 1/R5 + 1/R6,      0,    -1/R6],
    [      0, -1/R5,      0, 1/R5 + 1/R6,      0]
])

b = sp.Matrix([
    Vin_m * (1/RG + 1/R4) - Vin_p * (1/RG),
    Vin_p * (1/RG + 1/R4) - Vin_m * (1/RG),
    0,
    0,
    Vref / R6
])
```

```

sol = A.LUsolve(b)
vout_expr = sp.simplify(sol[4])

print("Vout =")
sp.pprint(vout_expr)

# Optional: extract differential gain and offset
G_diff = sp.simplify(sp.diff(vout_expr, Vin_p) - sp.diff(vout_expr, Vin_m))
V_offset = sp.simplify(vout_expr.subs({Vin_p: 0, Vin_m: 0}))

print("\nG_diff =")
sp.pprint(G_diff)

print("\nOffset term =")
sp.pprint(V_offset)

```

## Appendix B - Error Analysis for Instrumentation Amplifier Gain

The nominal differential gain is

$$G_{\text{diff}} = \left(1 + \frac{2R_4}{R_G}\right) \frac{R_6}{R_5}.$$

For small perturbations we can write the fractional change in gain as

$$\frac{\Delta G_{\text{diff}}}{G_{\text{diff}}} \approx S_{R_4} \frac{\Delta R_4}{R_4} + S_{R_G} \frac{\Delta R_G}{R_G} + S_{R_6} \frac{\Delta R_6}{R_6} + S_{R_5} \frac{\Delta R_5}{R_5},$$

where the sensitivity coefficients are obtained from  $S_{R_i} = \partial \ln G_{\text{diff}} / \partial \ln R_i$ . Evaluating these for  $R_4 = R_6 = 100 \text{ k}\Omega$ ,  $R_5 = R_G = 10 \text{ k}\Omega$  gives

$$\begin{aligned}
S_{R_4} &= \frac{2R_4/R_G}{1 + 2R_4/R_G} = \frac{20}{21} \approx +0.95, \\
S_{R_G} &= -\frac{2R_4/R_G}{1 + 2R_4/R_G} = -\frac{20}{21} \approx -0.95, \\
S_{R_6} &= +1, \quad S_{R_5} = -1.
\end{aligned}$$

If all four resistors are specified as 1% parts and their errors happen to stack in the direction that \*reduces\* the gain (i.e.  $R_4$  and  $R_6$  low,  $R_G$  and  $R_5$  high), the worst-case fractional gain error is approximately

$$\left| \frac{\Delta G_{\text{diff}}}{G_{\text{diff}}} \right|_{1\% \text{ max}} \approx (|S_{R_4}| + |S_{R_G}| + |S_{R_6}| + |S_{R_5}|) \times 1\% \approx 3.9\%.$$

This corresponds to a gain range of roughly

$$G_{\text{diff}} \approx 210 \times (1 \pm 0.039) \Rightarrow G_{\text{diff}} \in [\sim 202, \sim 218].$$

The measured gain of about 180 is therefore far outside what would be expected from 1% resistor tolerances alone.

Repeating the same analysis for 5% resistors,

$$\left| \frac{\Delta G_{\text{diff}}}{G_{\text{diff}}} \right|_{5\% \text{ max}} \approx (|S_{R_4}| + |S_{R_G}| + |S_{R_6}| + |S_{R_5}|) \times 5\% \approx 19.5\%,$$

which gives an approximate gain band

$$G_{\text{diff}} \approx 210 \times (1 \pm 0.195) \Rightarrow G_{\text{diff}} \in [\sim 170, \sim 251].$$

## Appendix C - Thermistor Acquisition Code

### MSP430FR5739 Firmware

Listing 3 captures the complete firmware used for the thermistor channel. GPIO routing, the ADC10\_B setup, and Timer\_A cadence follow the FR57xx documentation, while the UART framing matches the [255, MS5B, LS5B] packet described in Exercise 2.

**Listing 3.** Full MSP430FR5739 thermistor firmware (exported from lab3/Ryan\_part1ex2/main.c).

```

1 // main.c -- Thermistor ADC produces 3-byte frames (255, MS5B, LS5B)
2 // Source: lab3/Ryan_part1ex2/main.c (exported for Appendix C)
3 #include <msp430.h>
4 #include <stdint.h>
5
6 #define START_BYTE 0xFF
7 #define SAMPLE_HZ 5u
8
9 static void gpio_init(void) {
10     // Route P1.4 to ADC10 A4 (datasheet shows P1.4/TB0.1/UCAP0STE/A4)
11     P1DIR &= ~BIT4;
12     P1SEL0 |= BIT4;
13     P1SEL1 |= BIT4;
14
15     // UART pins: P2.0=UCA0TXD, P2.1=UCA0RXD (back-channel)
16     P2SEL1 |= (BIT0 | BIT1);
17     P2SEL0 &= ~(BIT0 | BIT1);
18
19     PM5CTL0 &= ~LOCKLPM5; // enable configured I/Os (FRAM devices)
20 }
21
22 static void uart_init_9600_smclk1m(void) {
23     UCA0CTLW0 = UCSWRST | UCSSEL__SMCLK; // hold in reset, SMCLK
24     UCA0BRW = 6; // 1 MHz / 16 / 9600 ~= 6.51
25     UCA0MCTLW = 0x2081; // UCOS16 | BRFS=8 | BRS=0x20
26     UCA0CTLW0 &= ~UCSWRST;
27 }
28
29 static void adc_init_a4(void) {
30     ADC10CTL0 &= ~ADC10ENC; // cfg gate (ENC=0)
31     ADC10CTL0 = ADC10SHT_2 | ADC10ON; // 16 S&H, ON
32     ADC10CTL1 = ADC10SHP | ADC10SSEL_3; // SAMPCON timer, SMCLK
33     ADC10CTL2 = ADC10RES; // 10-bit
34     ADC10MCTL0 = ADC10SREF_0 | ADC10INCH_4; // AVCC/AVSS, channel A4
35     ADC10CTL0 |= ADC10ENC; // arm
36 }
37
38 static void timer_init_50hz(void) {

```

```

39 // TA0 up mode, SMCLK ~1 MHz -> CCR0 = 1e6 / 50 = 20000
40 TA0CCR0 = 20000 - 1;
41 TA0CTL0 = CCIE;
42 TA0CTL = TASSEL__SMCLK | MC__UP | TACLK;
43 }
44
45 static inline void uart_send(uint8_t b) {
46     while (!(UCA0IFG & UCTXIFG)) ;
47     UCA0TXBUF = b;
48 }
49
50 static inline uint16_t adc_read_blocking(void) {
51     ADC10CTL0 |= ADC10SC; // start
52     while (ADC10CTL1 & ADC10BUSY) ; // wait
53     return ADC10MEM0 & 0x03FF; // 10-bit
54 }
55
56 int main(void) {
57     WDTCTL = WDTPW | WDTHOLD;
58
59     gpio_init();
60     uart_init_9600_smclk1m();
61     adc_init_a4();
62     timer_init_50hz();
63
64     __bis_SR_register(GIE); // IRQs on
65     for (;;)
66         __no_operation();
67 }
68
69 #pragma vector = TIMER0_A0_VECTOR
70 __interrupt void TIMER0_A0_ISR(void) {
71     uint16_t adc = adc_read_blocking(); // 0..1023
72     uint8_t ms5 = (adc >> 5) & 0x1F;
73     uint8_t ls5 = adc & 0x1F;
74
75     uart_send(START_BYTE);
76     uart_send(ms5);
77     uart_send(ls5);
78 }

```

## WinForms Capture Utility

Listing 4 shows the serial parser, Beta computation, polynomial correction, and live-plot update loop implemented in `Form1.cs`. Listing 5 highlights the waveform capture manager, CSV export, and twin  $\tau$  estimators (63% crossing and log-domain regression) that feed the dataset summarized in Table 4.

**Listing 4.** Thermistor WinForms stream handler, compensation, and UI refresh logic (excerpt from `Form1.cs`).

```

1 private void PortOnDataReceived(object sender, SerialDataReceivedEventArgs e)
2 {
3     while (_port.IsOpen && _port.BytesToRead > 0)
4     {
5         int value = _port.ReadByte();
6         if (value < 0)
7         {
8             return;
9         }
10
11         switch (_frameState)
12         {
13             case 0:

```



```

14         if (value == 0xFF)
15         {
16             _frameState = 1;
17         }
18         break;
19     case 1:
20         _ms5 = (byte)(value & 0x1F);
21         _frameState = 2;
22         break;
23     case 2:
24         _frameState = 0;
25         byte ls5 = (byte)(value & 0x1F);
26         int code10 = (_ms5 << 5) | ls5;
27         HandleSample(code10);
28         break;
29     }
30 }
31 }
32
33 private void HandleSample(int code10)
34 {
35     if (code10 < 0 || code10 > 1023)
36     {
37         return;
38     }
39
40     DateTime timestamp = DateTime.Now;
41     double vout = code10 * Vref / 1023.0;
42     double resistance;
43     if (vout <= 0.0001 || Math.Abs(Vref - vout) < 0.0001)
44     {
45         resistance = double.NaN;
46     }
47     else
48     {
49         resistance = RFixed * (vout / (Vref - vout));
50     }
51
52     double tempRaw = CalculateBetaTemperature(resistance);
53     double tempComp = _a0 + _a1 * tempRaw + _a2 * tempRaw * tempRaw;
54     double error = tempComp - tempRaw;
55
56     if (_csvWriter != null)
57     {
58         string line = string.Format(CultureInfo.InvariantCulture,
59             "{0:0},{1},{2:F6},{3:F2},{4:F3},{5:F3},{6:F3}",
60             timestamp, code10, vout, resistance, tempRaw, tempComp, error);
61         try
62         {
63             _csvWriter.WriteLine(line);
64         }
65         catch (IOException)
66         {
67             BeginInvoke(new Action(delegate
68             {
69                 AppendLog("Warning: unable to write to CSV (disk busy?).");
70             }));
71         }
72     }
73
74     lock (_sync)
75     {
76         if (_capturing)
77         {
78             double seconds = (timestamp.ToUniversalTime() - _captureStartUtc).TotalSeconds;
79             _captureBuffer.Add(new CaptureSample(seconds, tempComp));
80         }
81     }

```

```

82
83     LiveSample sample = new LiveSample();
84     sample.Timestamp = timestamp;
85     sample.TempRaw = tempRaw;
86     sample.TempComp = tempComp;
87     sample.Voltage = vout;
88     sample.Resistance = resistance;
89     sample.Error = error;
90
91     BeginInvoke(new Action(delegate
92     {
93         UpdateLiveDisplay(sample);
94     }));
95 }

```

**Listing 5.** Capture bookkeeping, CSV export, and dual  $\tau$  estimators used by process\_ntc.py.

```

1 private CaptureResult AnalyzeCapture(IList<CaptureSample> samples, string label, string captureFile)
2 {
3     List<CaptureSample> ordered = new List<CaptureSample>(samples);
4     ordered.Sort(delegate (CaptureSample a, CaptureSample b)
5     {
6         return a.Seconds.CompareTo(b.Seconds);
7     });
8
9     if (ordered.Count == 0)
10    {
11        return new CaptureResult(label, 0.0, double.NaN, double.NaN, double.NaN, double.NaN,
12            double.NaN, captureFile, "No samples captured.");
13    }
14
15    int lastIndex = ordered.Count - 1;
16    double duration = ordered[lastIndex].Seconds - ordered[0].Seconds;
17    double startTemp = ordered[0].Temperature;
18
19    double finalTemp;
20    if (ordered.Count >= 6)
21    {
22        double sum = 0.0;
23        int count = 0;
24        int startIndex = Math.Max(ordered.Count - 6, 0);
25        for (int i = startIndex; i < ordered.Count; i++)
26        {
27            sum += ordered[i].Temperature;
28            count++;
29        }
30        finalTemp = count > 0 ? sum / count : ordered[lastIndex].Temperature;
31    }
32    else
33    {
34        finalTemp = ordered[lastIndex].Temperature;
35    }
36
37    double delta = finalTemp - startTemp;
38
39    List<string> notes = new List<string>();
40    if (Math.Abs(delta) < 0.5)
41    {
42        notes.Add("Delta-T too small for reliable fit.");
43    }
44
45    double tau63 = EstimateTauBy63Percent(ordered, startTemp, finalTemp);
46    if (double.IsNaN(tau63))
47    {
48        notes.Add("63% threshold not reached.");
49    }
50 }

```

```

51     RegressionResult regression = EstimateTauByRegression(ordered, startTemp, finalTemp);
52     if (double.IsNaN(regression.TauFit) || double.IsNaN(regression.FitR2))
53     {
54         notes.Add("Regression fit failed.");
55     }
56
57     string notesCombined = string.Join(" ", notes.ToArray()).Trim();
58
59     return new CaptureResult(label, duration, startTemp, finalTemp, tau63, regression.TauFit,
60         regression.FitR2, captureFile, notesCombined);
61 }
62
63 private string SaveCaptureCsv(IEnumerable<CaptureSample> samples, string scenario)
64 {
65     try
66     {
67         string capturesDir = Path.Combine(AppDomain.CurrentDomain.BaseDirectory, "captures");
68         Directory.CreateDirectory(capturesDir);
69
70         string sanitized = string.Join("-", scenario.Split(Path.GetInvalidFileNameChars()))
71             .Replace(' ', '_');
72         while (sanitized.Contains("__"))
73         {
74             sanitized = sanitized.Replace("__", "-");
75         }
76         sanitized = sanitized.Trim('_');
77         if (string.IsNullOrEmpty(sanitized))
78         {
79             sanitized = "capture";
80         }
81
82         string filePath = Path.Combine(capturesDir,
83             string.Format("capture_{0:yyyyMMdd-HHMMss}_{1}.csv", DateTime.Now, sanitized));
84
85         using (StreamWriter writer = new StreamWriter(filePath, false, Encoding.UTF8))
86         {
87             writer.WriteLine("seconds,temp_comp_c");
88             List<CaptureSample> ordered = samples.OrderBy(s => s.Seconds).ToList();
89             for (int i = 0; i < ordered.Count; i++)
90             {
91                 CaptureSample sample = ordered[i];
92                 writer.WriteLine(string.Format(CultureInfo.InvariantCulture,
93                     "{0:F3},{1:F3}", sample.Seconds, sample.Temperature));
94             }
95         }
96
97         return filePath;
98     }
99     catch (Exception ex)
100     {
101         BeginInvoke(new Action(delegate
102         {
103             AppendLog("Capture CSV save failed: " + ex.Message);
104         }));
105         return string.Empty;
106     }
107 }
108
109 private static double EstimateTauBy63Percent(IList<CaptureSample> samples,
110     double startTemp, double finalTemp)
111 {
112     double step = finalTemp - startTemp;
113     if (Math.Abs(step) < 0.5)
114     {
115         return double.NaN;
116     }
117
118     double target = finalTemp - (finalTemp - startTemp) * Math.Exp(-1.0);

```

```
119     bool heating = step > 0;
120
121     for (int i = 0; i < samples.Count; i++)
122     {
123         CaptureSample sample = samples[i];
124         if (heating && sample.Temperature >= target)
125         {
126             return sample.Seconds;
127         }
128
129         if (!heating && sample.Temperature <= target)
130         {
131             return sample.Seconds;
132         }
133     }
134
135     return double.NaN;
136 }
137
138 private static RegressionResult EstimateTauByRegression(
139     IList<CaptureSample> samples, double startTemp, double finalTemp)
140 {
141     double delta = finalTemp - startTemp;
142     if (Math.Abs(delta) < 0.5)
143     {
144         return new RegressionResult(double.NaN, double.NaN);
145     }
146
147     List<double> times = new List<double>();
148     List<double> lnValues = new List<double>();
149     for (int i = 0; i < samples.Count; i++)
150     {
151         CaptureSample sample = samples[i];
152         if (sample.Seconds <= 0.05)
153         {
154             continue;
155         }
156
157         double diff = Math.Abs(finalTemp - sample.Temperature);
158         if (diff <= 1e-3)
159         {
160             continue;
161         }
162
163         if (diff > Math.Abs(delta))
164         {
165             continue;
166         }
167
168         if (diff <= Math.Abs(delta) * 0.02)
169         {
170             continue;
171         }
172
173         times.Add(sample.Seconds);
174         lnValues.Add(Math.Log(diff));
175     }
176
177     if (times.Count < 5)
178     {
179         return new RegressionResult(double.NaN, double.NaN);
180     }
181
182     int n = times.Count;
183     double sumX = 0.0;
184     double sumY = 0.0;
185     double sumXY = 0.0;
186     double sumX2 = 0.0;
```

```

187     for (int i = 0; i < n; i++)
188     {
189         double x = times[i];
190         double y = lnValues[i];
191         sumX += x;
192         sumY += y;
193         sumXY += x * y;
194         sumX2 += x * x;
195     }
196
197     double denominator = n * sumX2 - sumX * sumX;
198     if (Math.Abs(denominator) < 1e-12)
199     {
200         return new RegressionResult(double.NaN, double.NaN);
201     }
202
203     double slope = (n * sumXY - sumX * sumY) / denominator;
204     double intercept = (sumY - slope * sumX) / n;
205
206     double tauFit = double.NaN;
207     if (slope < 0.0)
208     {
209         tauFit = -1.0 / slope;
210     }
211
212     double meanY = sumY / n;
213     double ssTot = 0.0;
214     double ssRes = 0.0;
215     for (int i = 0; i < n; i++)
216     {
217         double x = times[i];
218         double y = lnValues[i];
219         double est = slope * x + intercept;
220         ssTot += Math.Pow(y - meanY, 2);
221         ssRes += Math.Pow(y - est, 2);
222     }
223
224     double r2 = ssTot <= 1e-12 ? double.NaN : 1.0 - (ssRes / ssTot);
225     return new RegressionResult(tauFit, r2);
226 }

```

## Appendix D - Load-Cell Desktop Application

The load-cell WinForms program reuses the same serial framing but layers on rolling averages, tare management, and a regression-based calibration workflow. Listing 6 covers the byte parser, rolling queues that back the live plot, and the stability metric that drives the “Stable” badge. Listing 7 shows how calibration points are captured, filtered for stability, and converted into slope/intercept coefficients that update the UI in real time.

**Listing 6.** Load-cell serial parser, rolling statistics, and chart updates (Form1.cs excerpt).

```

1  private void SerialPort_DataReceived(object sender, SerialDataReceivedEventArgs e)
2  {
3      try
4      {
5          while (_serialPort.IsOpen && _serialPort.BytesToRead > 0)
6          {
7              int next = _serialPort.ReadByte();
8              if (next < 0)
9              {
10                 break;
11             }
12             ParseByte((byte)next);

```

```

13     }
14 }
15 catch (TimeoutException)
16 {
17     // ignore transient timeouts
18 }
19 catch (InvalidOperationException)
20 {
21     // occurs when closing the port
22 }
23 catch (IOException)
24 {
25     // ignore IO errors from port closure
26 }
27 }
28
29 private void ParseByte(byte value)
30 {
31     switch (_parserState)
32     {
33         case ParserState.WaitingForStart:
34             if (value == 0xFF)
35             {
36                 _parserState = ParserState.ReadingMsb;
37             }
38             break;
39
40         case ParserState.ReadingMsb:
41             if (value == 0xFF)
42             {
43                 _parserState = ParserState.ReadingMsb;
44             }
45             else
46             {
47                 _pendingMs5 = (byte)(value & 0x1F);
48                 _parserState = ParserState.ReadingLsb;
49             }
50             break;
51
52         case ParserState.ReadingLsb:
53             if (value == 0xFF)
54             {
55                 _parserState = ParserState.ReadingMsb;
56             }
57             else
58             {
59                 int raw = ((_pendingMs5 << 5) | (value & 0x1F)) & 0x3FF;
60                 _parserState = ParserState.WaitingForStart;
61                 ProcessSample(raw);
62             }
63             break;
64     }
65 }
66
67 private void ProcessSample(int rawCount)
68 {
69     DateTime timestamp = DateTime.Now;
70     double voltage;
71     double weight;
72     double avgWeight;
73     double avgRaw;
74     double stdDev;
75     bool isStable;
76     double mass;
77
78     lock (_sampleLock)
79     {
80         _hasSample = true;

```

```

81     _lastRaw = rawCount;
82     voltage = rawCount * ReferenceVoltage / MaxAdcValue;
83     _lastVoltage = voltage;
84
85     mass = (_scaleSlope * rawCount) + _scaleIntercept;
86     _lastMass = mass;
87     weight = mass - _tareOffset;
88     _lastWeight = weight;
89
90     int windowSize = Math.Max(1, _rollingWindowSize);
91
92     UpdateRollingQueue(_rawRollingQueue, ref _rawRollingSum, rawCount, windowSize);
93     avgRaw = _rawRollingQueue.Count > 0 ? _rawRollingSum / _rawRollingQueue.Count : rawCount;
94     _lastAverageRaw = avgRaw;
95
96     UpdateRollingQueue(_weightRollingQueue, ref _weightRollingSum, weight, windowSize);
97     avgWeight = _weightRollingQueue.Count > 0 ? _weightRollingSum / _weightRollingQueue.Count : weight;
98     _lastAverageWeight = avgWeight;
99
100    _stabilityQueue.Enqueue(new TimedValue(timestamp, weight));
101    while (_stabilityQueue.Count > 0 && (timestamp - _stabilityQueue.Peek().Timestamp).TotalMilliseconds >
        StabilityWindowMilliseconds)
102    {
103        _stabilityQueue.Dequeue();
104    }
105
106    stdDev = ComputeStandardDeviation(_stabilityQueue);
107    _lastStdDev = stdDev;
108    isStable = !double.IsNaN(stdDev) && _stabilityQueue.Count >= 5 && stdDev <= _stabilityThreshold;
109    _lastStable = isStable;
110
111    _chartPending.Enqueue(new ChartPoint(timestamp, weight, avgWeight));
112    while (_chartPending.Count > ChartMaxPoints)
113    {
114        _chartPending.Dequeue();
115    }
116
117    _sampleIndex++;
118 }
119
120
121 private void UiTimer_Tick(object sender, EventArgs e)
122 {
123     int raw;
124     double avgRaw;
125     double voltage;
126     double weight;
127     double avgWeight;
128     double stdDev;
129     bool isStable;
130     List<ChartPoint> pendingPoints = null;
131
132     lock (_sampleLock)
133     {
134         if (!_hasSample)
135         {
136             return;
137         }
138
139         raw = _lastRaw;
140         avgRaw = _lastAverageRaw;
141         voltage = _lastVoltage;
142         weight = _lastWeight;
143         avgWeight = _lastAverageWeight;
144         stdDev = _lastStdDev;
145         isStable = _lastStable;
146
147         if (_chartPending.Count > 0)

```

```

148     {
149         pendingPoints = new List<ChartPoint>(_chartPending.Count);
150         while (_chartPending.Count > 0)
151         {
152             pendingPoints.Add(_chartPending.Dequeue());
153         }
154     }
155 }
156
157 UpdateUi(raw, avgRaw, voltage, weight, avgWeight, stdDev, isStable);
158
159 if (pendingPoints != null && pendingPoints.Count > 0)
160 {
161     UpdateChart(pendingPoints);
162 }
163 }
164
165 private void UpdateUi(int raw, double avgRaw, double voltage, double weight, double avgWeight, double stdDev,
166     bool isStable)
167 {
168     txtRawAdc.Text = raw.ToString(CultureInfo.InvariantCulture);
169     txtAverageRaw.Text = avgRaw.ToString("F1", CultureInfo.InvariantCulture);
170     txtVoltage.Text = voltage.ToString("F3", CultureInfo.InvariantCulture);
171     txtWeight.Text = weight.ToString("F3", CultureInfo.InvariantCulture);
172     txtAverageWeight.Text = avgWeight.ToString("F3", CultureInfo.InvariantCulture);
173     txtStdDev.Text = double.IsNaN(stdDev) ? "--" : stdDev.ToString("F4", CultureInfo.InvariantCulture);
174
175     lblStabilityStatus.Text = isStable ? "Stable" : "Unstable";
176     lblStabilityStatus.ForeColor = isStable ? Color.ForestGreen : Color.Firebrick;
177 }
178
179 private void UpdateChart(IEnumerable<ChartPoint> points)
180 {
181     var area = chartData.ChartAreas[0];
182     Series weightSeries = chartData.Series["Weight"];
183     Series avgSeries = chartData.Series["AvgWeight"];
184
185     foreach (ChartPoint point in points)
186     {
187         double x = point.Timestamp.ToOADate();
188         weightSeries.Points.AddXY(x, point.Weight);
189         avgSeries.Points.AddXY(x, point.AverageWeight);
190     }
191
192     while (weightSeries.Points.Count > ChartMaxPoints)
193     {
194         weightSeries.Points.RemoveAt(0);
195     }
196
197     while (avgSeries.Points.Count > ChartMaxPoints)
198     {
199         avgSeries.Points.RemoveAt(0);
200     }
201
202     if (weightSeries.Points.Count > 0)
203     {
204         area.AxisX.Minimum = weightSeries.Points[0].XValue;
205         area.AxisX.Maximum = weightSeries.Points[weightSeries.Points.Count - 1].XValue;
206     }
207
208     chartData.Invalidate();
209 }
210
211 private static double ComputeStandardDeviation(IEnumerable<TimedValue> samples)
212 {
213     int count = 0;
214     double mean = 0;
215     double m2 = 0;

```



**Listing 7.** Calibration capture, regression, and tare handling routines for the load-cell UI.

```

1  private void btnAddCalibrationPoint_Click(object sender, EventArgs e)
2  {
3      if (!_hasSample)
4      {
5          MessageBox.Show(this, "No sensor samples yet. Wait until readings appear before capturing calibration
6              data.", "Calibration", MessageBoxButtons.OK, MessageBoxIcon.Information);
7          return;
8      }
9
10     double knownMass = (double)numKnownMass.Value;
11     double avgRaw;
12     double stdDev;
13     bool isStable;
14
15     Lock (_sampleLock)
16     {
17         avgRaw = _rawRollingQueue.Count > 0 ? _rawRollingSum / _rawRollingQueue.Count : _lastRaw;
18         stdDev = _lastStdDev;
19         isStable = _lastStable;
20     }
21
22     if (!isStable)
23     {
24         DialogResult response = MessageBox.Show(
25             this,
26             $"Current measurement is unstable (std dev {stdDev:F4} kg). Capture anyway?",
27             "Unstable measurement",
28             MessageBoxButtons.YesNo,
29             MessageBoxIcon.Warning);
30
31         if (response != DialogResult.Yes)
32         {
33             return;
34         }
35     }
36
37     var point = new CalibrationPoint(avgRaw, knownMass);
38     _calibrationPoints.Add(point);
39
40     UpdateCalibrationListDisplay();
41     RecomputeCalibration();
42 }
43
44 private void btnClearCalibration_Click(object sender, EventArgs e)
45 {
46     if (_calibrationPoints.Count == 0)
47     {
48         return;
49     }
50
51     DialogResult result = MessageBox.Show(this, "Clear all calibration points?", "Clear calibration",
52         MessageBoxButtons.YesNo, MessageBoxIcon.Question);
53     if (result != DialogResult.Yes)
54     {
55         return;
56     }
57
58     _calibrationPoints.Clear();
59
60     Lock (_sampleLock)
61     {
62         _scaleSlope = 0;
63         _scaleIntercept = 0;
64     }

```

```
63
64     UpdateCalibrationListDisplay();
65     UpdateCalibrationSummaryDisplay();
66 }
67
68 private void UpdateCalibrationListDisplay()
69 {
70     lstCalibration.BeginUpdate();
71     lstCalibration.Items.Clear();
72
73     foreach (CalibrationPoint point in _calibrationPoints)
74     {
75         string entry = string.Format(CultureInfo.InvariantCulture, "ADC {0:F1} -> {1:F3} kg", point.Raw, point.
            Mass);
76         lstCalibration.Items.Add(entry);
77     }
78
79     lstCalibration.EndUpdate();
80 }
81
82 private void RecomputeCalibration()
83 {
84     double slope;
85     double intercept;
86
87     if (_calibrationPoints.Count == 0)
88     {
89         slope = 0;
90         intercept = 0;
91     }
92     else if (_calibrationPoints.Count == 1)
93     {
94         CalibrationPoint single = _calibrationPoints[0];
95         slope = single.Raw != 0 ? single.Mass / single.Raw : 0;
96         intercept = 0;
97     }
```